



95 Chanter's Hill, Barnstaple, Devon, EX32 8DG

Tel/Fax: (01271) 379622 - Mobile: (07971) 924074

email: info@parts4boilers.net - web: www.parts4boilers.net

Facebook: www.facebook.com/parts4boilers - Twitter: [@parts4boilers](https://twitter.com/parts4boilers)

Independent Trade Suppliers of Heating Spares, Controls & Accessories

MANUFACTURERS PARTS LIST

VOKERA

Part Number	Description
01005043	Obsolete - Modulator Kit
01005067	LPG To NG Conversion Kit
01005080	Test Component
01005085	Obsolete - Frame
01005088	LPG To NG Conversion Kit
01005090	NG TO LPG Conversion Kit
01005127	3Way Valve Overhaul kit
01005133	Frame assembly
01005134	Obsolete - Frame assembly
01005135	Obsolete - Frame assembly
01005137	Venting Plugs Kit
01005138	Frame
01005177	Microswitch Kit Rep 8468 & 8447
01005178	Microswitch rep 0182/0809/0811
01005180	Conversion KitLPG to NG
01005181	Obsolete - Conversion kit
01005182	Conversion Kit to NG
01005183	Obsolete - Conversion kit
01005193	NG to LPG conversion kit
01005195	LPG to NG conversion kit
01005217	LPG Conversion kit
01005225	Conversion Kit LPG to NG
01005234	Glass Kit
01005242	Spark Electrode Kit
01005243	Frame assembly
01005245	Exchanger Inplace of 1841 & 2381
01005246	Main Heat Exchanger rep 2378 & 1914
01005247	Engineers and Agents Only Main Heat Exchanger in place 5388 & 10021231

01005248	Engineer/Agents 7810 & 10021232
01005259	Frame Assembly
01005272	Air Pressure Switch Rep 7070/8195/9232
01005284	Conversion kit to NG
01005285	NG to LPG conversion kit
01005286	LPG to NG conversion kit
01005291	Condensing Unit
01005292	Connections kit
01005293	Venturi press tube kit
01005294	Frame
01005297	NG to LPG Conversion kit
01005303	NG to LPG Conversion kit
01005306	Knob supp & gear wheel kit
01005323	Casing
01005348	Obsolete - Anti condense kit
01005362	Silicone tube kit
01005365	Frame assembly
01005366	Condensing exchanger assembly
01005369	Condensing exchanger assembly
01005389	NG to LPG Con Kit (4.7 jet)
01005390	Use 01005448
01005403	Frame
01005404	Use 10027599
01005405	Use 20030209 for Venturi and 10027538 for Pito pipe
01005407	NG to LPG conversion kit
01005409	NG to LPG conversion kit
01005411	Condensing unit
01005415	Frame
01005441	Frame assembly
01005442	Hinge assembly
01005443	Condensing exchanger assembly
01005444	Frame Assembly
01005445	Frame Assembly
01005446	NG to LPG conversion kit (3.6)
01005447	NG to LPG conversion kit (4.7)
01005448	NG to LPG conversion kit (5.0 jet) Replaced 01005390
01005458	USE 10028537
01005464	LPG to NG conversion kit
01005465	LPG to NG Conversion kit (6.7)
01005466	LPG to NG Conversion kit (7.0 Jet)
01005468	Wiring box
01005469	Clips for anti frost resistors
01005481	Casing
01005482	Casing
01005497	Casing
01005500	NG to LPG conversion kit
0112	Obsolete - Pressure limiting va
0113	Screw
0114	Obsolete - Screw
0117	Obsolete - Fan Spring

0119	Obsolete
0139	3 Way Valve Tail Plate
0159	3 Way Valve Head Shaft
0182	Use 01005178
0184	Extension Shaft
020	Silicone Grease
021	Obsolete - Threeway valve key
0213	Obsolete -Conversion kit LPG -
0215	Obsolete Conversion kit LPG
0216	Front Seal
0218	Retaining Ring
0219	Shuttle
0220	Obsolete - Screw
0221	Washer
0225	Obsolete - Eclipse Fan Adapter
0226	Diaphragm (6 Screw)
0292	Obsolete
029370	Use 029620
029373	Casing (Right Side)
029374	Casing (Left Side)
029375	Casing (Front)
029376	Fixing Plate
0296	Obsolete
029620	Casing (Top)
0298	Obsolete - 0.75 jet
0301	Obsolete - Nylon Plate
0309	Front Seal
03165	Thermal Store
0338	Obsolete
0340	Obsolete
0341	Fibre Washer
0349	O'Ring
0352	Obsolete
0353	Obsolete - O Ring
0357	Obsolete - Nat Gas Jets 125
0358	Obsolete - LPG Jets 072
0360	Obsolete - Combustion Chamber Metal Case
0361	Obsolete - Insulation Panels
0363	Obsolete - Insulation Panels For Chamber
0364	Obsolete - By pass plug
0365	Obsolete - ByPassSpring
0366	Obsolete - Filter (Cold Water Inlet)
0367	Obsolete - Flow Regulator
0371	Washer
0373	Obsolete - O Ring
0378	Obsolete - Water Flow Regulating Screw
0379	Obsolete - By pass plug
0380	Obsolete - By pass plug & spring
0381	Venturi
0382	Obsolete - Insulation Panels for chamber

0394	NG Spring
0395	Obsolete - Aluminum Spring
0401	Obsolete - GasValveSolenoid
0402	Obsolete - Gas valve solenoid
0407	Obsolete - Pipe
04213	Use 04227 Insulation panel
04223	Use 04227
04227	Insulation Cover
0439	Auto Air Vent
0442	Air Box Clip
0443	Obsolete - Instrument Panel
0444	Obsolete - Instrument panel
0445	Obsolete - Instrument Panel
0533	Obsolete
0536	Nylon Plate
05420	Obsolete - Bracket
05422	Obsolete - Clip (R102906)
0549	Obsolete - Auto By-Pass Retaining Cap
0550	Obsolete - Spring for Gas Valve
0552	Obsolete - Spring For Auto By-Pass (Large)
0554	O'Ring
0555	Spring
0556	By-pass Bearer Plate
0557	Diaphragm
05589	Bar
0563	Obsolete - Gas Valve Operator
05660	Bracket
05800	Obsolete - Bracket (R102918)
05801	Elbow (102921)
05802	Elbow
05803	Tube
05808	Clip
0587	N.G Jets 1.35
0588	Obsolete - Towns Gas Jet
0594	N.Gas to LPG Conversion Kit
0598	Obsolete - Gas Valve Governor
0600	Obsolete - Screw
0602	Obsolete - Solenoid
0604	.77 jet
0615	Obsolete - Governor
0618	Obsolete - Wiring Harness
0620	Obsolete
0623	Obsolete - ClockWire
0628	Microswitch
0637	Obsolete - 0.80 jets
0642	Obsolete
0652	Obsolete
0658	Microswitch
0659	Obsolete
0661	Obsolete - Flow Cup

066314	Obsolete - Badge
0666	Obsolete - By Pass Shutter
0667	O'Ring
0680	Obsolete - Solenoid
0681	Obsolete - Spark Coil
0704	O'Ring
0706	O'Ring
0709	Spring
0714	Diaphragm
0716	O'Ring
0717	Plate
0736	Obsolete - Clock Wires
0737	Obsolete - Wire Use 0738
0749	Obsolete
0750	Use 7625
077000	Obsolete - (R102399)
077085	Use 1859
077086	Use 1860
077939	Use 10027352
078125	Control Panel
078127	Linea max wiring harness
078128	Obsolete - Cover (R102934)
078129	Control Panel Flap
078130	Linea max wiring (inc h/l stat) Use 078127
078139	Pressure Gauge
078140	Use 106326
078617	Thermostat - Linea Max/Meteor
0795	Washer
0803	Obsolete
0809	Use 01005178
0811	Use 01005178
0828	Single Microswitch
0851	Nut
0852	By-Pass Bobbin
0855	Front Seal
0856	Front Seal Bush
0857	Spring
0858	Spindle Set
0862	Tail Plate
0863	3 Port Valve
0866	Obsolete - Screw For Domestic Manifold
08665	Use 10029306
0867	Front Seal
0869	Bearer Plate
0870	Diaphragm
0873	Non Return Nylon Body
0874	Obsolete - 1 Inch Nut
0875	Obsolete - Nylon Shuttle
0876	Obsolete - Dist Manifold
0877	Obsolete - Filter

0878	Obsolete - Non Return Brass Bod
088031	Use 10021792
088042	Obsolete
088106	Pipe
088107	Pipe
088108	Pipe
088110	Pipe
088111	Pipe
088112	Pipe
088113	Gas Pipe
088114	Gas Pipe
088115	Pipe
088116	Pipe
088117	Pipe
088118	Pipe
088119	Brass Connection
088120	Use 1488
088122	Manifold
088124	Use 1786
088125	Valve
088126	Use 1788
088127	Use 1789
088128	Use 1790
088129	Use 1791
088131	Use 1793
088132	Filling Loop Pipe (Straight Tube)
088133	Use 1821
088134	Use 1822
088135	Valve
088136	Nut
088137	Use 1824
088140	Filling loop (2 right angles)
088153	Obsolete - Nut Small
088155	Heat Exchanger
088181	Expansion Vessel 10 Litre
088383	Flow Restrictor 18 litre
08948	Thermal Store Complete
0903	Obsolete - Fan Support Kit
0934	Use 0594
0935	Obsolete - Conversion Kit to NG
0940	Obsolete -Ignition Box
0950	Ignition Box
0963	Use 01005272
0975	Pressure Switch
0978	Obsolete - Pressure Switch
099862	Use 10025074
099864	Use 1837
OCR106339	PIPE
10020041	11L Flow governor (Beige)
10020054	Obsolete - Wiring Harness

10020076	Expansion Vessel Pipe
10020104	Burner (replaces 5295)
10020216	Cover Assembly
10020217	Cover Assembly
10020223	Use 0225
10020265	NG Injector
10020305	Obsolete - Cable
10020308	Obsolete -Logo Support
10020330	Use 10022349
10020335	Manifold Top Rep 2904
10020430	Air box cover rep 2061
10020437	Use 10021792
10020438	Pump
10020439	Heating manifold
10020477	Use 10024558
10020478	Use 10024528
10020493	Main Printed Circuit Board
10020511	Burner Nat Gas
10020512	Obsolete -Burner LPG
10020513	Main Heat Exchanger
10020514	Combustion Chamber Assembly
10020517	Front Insulation Panel for Combustion Chamber
10020518	Rear Insulation Panel for Combustion Chamber
10020519	Flow Pipe
10020520	Obsolete -Flow Pipe
10020521	Obsolete - Pump Pipe
10020522	Use 10024731
10020523	White Bracket
10020524	Lower Connection Plate
10020525	Obsolete - Fixing jig support
10020529	M3 to Heat thermistor, High limit stat, Burner stat & Analogue PD switch Wiring
10020530	M5 to DHW thermistor, Water pressure switch & DHW flow switch Wiring
10020597	Use 01005085 (Complete Frame)
10020599	Use 01005085 (Complete Frame)
10020601	Obsolete - Appliance Casing
10020603	Obsolete - Distribution Panel
10020604	Obsolete UpperTransversepanel
10020605	Obsolete LowerTransversePanel
10020607	PCB Cover
10020608	Cover Panel
10020609	Obsolete - Tap
10020610	LED Lens Tube
10020611	Pin
10020612	Pipe
10020613	Room sealed Chamber
10020615	M1 to High limit stat & Gas valve
10020616	M6 to Fan & PD switch
10020617	M4 to DHW thermistor, Heat thermistor, DHW Flow switch, Pressure switch & Modulator
10020621	Use 10022658
10020622	Pressure Gauge

10020624	Test Plate
10020625	Square Plastic Nut underneath Test Plate
10020626	Stop Clip (individual)
10020627	Fumes Testing Connection Pipe
10020631	Obsolete
10020645	Obsolete - Mode Selector Knob
10020647	Use 10020893
10020648	Obsolete - Pipe
10020649	Obsolete - Wiring Harness
10020661	Obsolete - Air Box Bottom
10020664	Pipe
10020666	Obsolete - Pipe
10020667	Gas Pipe
10020668	Obsolete - Connection
10020669	On/Off Shaft
10020670	Temperature Shaft
10020674	Knob
10020676	LED Light Guide
10020679	Case - Aquanova
10020687	Use 10028996
10020688	Full Loom
10020707	Distribution Manifold
10020714	Pipe
10020754	Obsolete - Clock Blanking
10020781	Obsolete - Pipe
10020793	Fan Assembly (Includes Venturi)
10020799	Obsolete - Heating Manifold
10020838	Use 20040675
10020839	Expansion Vessel
10020840	Expansion Vessel
10020857	Use 0225
10020871	Non-Return/Double-Check Valve
10020885	Obsolete - Gas Pipe
10020886	Obsolete - Pipe
10020887	Obsolete - Pipe
10020889	Air Pressure Switch
10020890	Pressure Switch
10020891	Obsolete - Control panel
10020893	Obsolete - Mode selector shaft
10020894	Obsolete -Air Chamber
10020896	Option hanging bracket
10020897	Gas Cock
10020898	Safety Valve Outlet Tail
10020951	Obsolete -Front Panel
10020963	Use 10023603
10020966	Front Flap
10020967	Lower control panel right hand
10020968	Lower control panel left hand
10020973	Casing
10021005	Connection

10021006	Filling valve
10021021	Use 10025074
10021041	Flow Pipe
10021065	M3 to Heat thermistor, High limit stat, Burner stat & Analogue PD switch Wiring
10021080	Obsolete -Screws on Eclipse
10021108	M3 to Heat thermistor, High limit stat, Burner stat & Analogue PD switch Wiring
10021115	Obsolete - Clip
10021117	M9 to M2 ribbon cable from the main PCB to display PCB
10021120	Inst. Panel Back Pan
10021127	Instrument Panel
10021131	Upper Proof
10021231	Main Heat Exchanger
10021232	Main Heat Exchanger
10021233	Wiring Tray
10021235	Thermostat
10021236	M3 to Heat thermistor, High limit stat & PD switch
10021240	Flow Pipe
10021241	Obsolete - Pipe
10021251	Manifold Extension
10021252	Air box bottom
10021253	Gas Valve
10021254	Gas Valve Outlet Pipe
10021255	Spark Electrode Inc Lead
10021256	Obsolete -Return Pipe
10021257	Flow Pipe
10021258	Return Pipe
10021259	Flow Pipe
10021260	Mynute 10e Instrument Panel
10021262	Use 10029470
10021263	Selection Switch Shaft
10021264	T/Stat & Mode Knob
10021265	PCB Cover
10021266	Obsolete - Terminal Block Cover
10021267	Obsolete - LED Lens
10021268	J3 to Gas valve & water pressure switch and J4 to the Pump Wiring
10021269	Wiring J6 to Fan PD switch & High limit stat and J7 to Heat thermistor (top half)
10021270	Wiring J6 to Fan PD switch & High limit stat and J7 to Heat thermistor (bottom half)
10021271	Wiring Socket Mynute 10/14/20E
10021272	Ignition Transformer with Wires
10021273	Use 1783 and cut down
10021287	Mynute 14E Instrument Panel
10021288	Air Box bottom
10021289	Obsolete -Return Pipe
10021290	Flow Pipe
10021291	Mynute 20E Instrument Panel
10021293	Distribution Manifold
10021294	Distribution Manifold
10021367	Heat Exchanger
10021398	Use 10025985
10021407	Wiring harness

10021419	Main heat exchanger
10021420	Flue Gas Flange
10021519	Obsolete - Frame
10021558	Glass
10021568	Use 10024779
10021570	Obsolete - Cover assembly
10021625	Non return valve
10021702	33mm Flue Restrictor Ring (Mynute 1
10021726	Venturi for Fan
10021730	44mm Flue Restrictor Ring
10021792	Pump Rep 10020437
10021817	Spark Electrode Cable
10021821	Heating Distribution Manifold
10021847	Use 10024528
10021848	Use 10028891
10021849	PCB Cover Rep 1855
10021899	Connection
10021901	Non return valve
10021906	Pipe
10021947	M14 to Ignition PCB & Gas valve Wiring
10021949	Use 10027540
10021951	Instrument Panel
10021972	Fan Connection
10021973	Fumes testing connection pipe
10021984	Use 10029470
10021991	Use 10022659
10022000	Pipe - Replaces 2218
10022002	Flexible Pipe
10022015	Instrument Panel Replaces 1919
10022027	Use 10025891
10022029	Obsolete -Instrument panel2075
10022112	M4 to Ignition PCB & Mod coil
10022125	Pipe
10022174	Use 10028890
10022229	Use 20078519
10022278	Obsolete - Ht Exc Field fix
10022279	Obsolete -Ht Exc Field fix
10022282	Obsolete - Ht Exc Field fix
10022333	Eclipse 2 Wiring Harness
10022348	Use 10022349
10022349	DHW Actuator replaces 10020330
10022352	Use 10024731
10022355	Obsolete - Wiring Harness
10022388	Air box bottom
10022424	Shaft
10022441	Gas Valve
10022442	Gas Pipe
10022443	Obsolete - Inlet gas pipe
10022444	Obsolete - Eclipse Pump couplin
10022445	Obsolete - Eclipse flow pipe

10022450	Air Conveyor
10022451	Gas Diaphragm
10022453	Main Burner Injector LPG
10022483	M1 to motorised valve wiring harness
10022491	Use 10028996
10022499	Connection (replaces 2260)
10022518	Venting plug
10022530	Pipe
10022533	Main Printed Circuit Board
10022556	Pressure switch condensing
10022570	Cap
10022614	Fumes test conn pipe
10022620	Side Insulation Panel for Combustion Chamber
10022621	Use 10022620
10022622	Fan flue connection
10022626	Pipe
10022658	Connection
10022659	Ignition Transformer rep 10021991
10022666	Actuator cable
10022667	Combustion cable
10022668	Gas valve cable
10022671	Obsolete - Bracket
10022672	Room Sealed Chamber
10022685	Eclipse 226 ESC PCB NG & LPG
10022686	Eclipse 226 ESS PCB NG & LPG
10022687	Eclipse 216 ESS PCB NG & LPG
10022688	Use 10022685
10022689	Use 10022686
10022690	Use 10022687
10022714	Flue draught diverter
10022715	Combustion chamber
10022718	Fan
10022726	Washer
10022727	NG burner
10022826	LED light guide
10022853	Fan (replaces 8891&1018)
10022859	Obsolete - Pipe
10022860	Obsolete - Door panel
10022867	Obsolete - Siphon Connection
10022868	Obsolete - Siphon Pipe
10022980	NG burner
10022981	Hydraulic control cable
10023011	Cover
10023044	Bush (replaces 1863)
10023048	Fan to Flue Connector
10023051	Obsolete - Instrument panel
10023065	Use 10020898
10023066	Terminal Block and wires
10023067	M5 to Water pressure switch wiring
10023073	Valve

10023095	Air Box Bottom
10023136	Power wiring harness
10023168	NG burner
10023169	Burner
10023181	Fan/Flue Connector (includes Venturis)
10023182	Flue elbow
10023183	Fan/Flue Connector (Includes Venturi's)
10023185	Venturi
10023195	Use 1848
10023198	Pipe
10023202	Pipe
10023203	Pipe
10023208	Pipe
10023209	Pipe
10023210	Pipe
10023211	Pipe
10023235	Vent Plug
10023238	Cover assembly
10023276	Obsolete - Flue Gas Flange
10023277	Obsolete - Instrument panel
10023279	Use 10027792 (log book incl)
10023280	Flue Gas Flange
10023281	Instrument panel
10023297	Display PCB
10023299	Input Printed Circuit Board
10023347	Instrument Panel
10023431	Thermo-pressure gauge
10023432	Use 10026050
10023451	Gas Injector (Worgas)
10023476	Obsolete - PCB Holding
10023477	Obsolete - Cover
10023478	Use 2033
10023479	Main Printed Circuit Board
10023482	Domestic Heat Exchanger
10023483	Obsolete - Ht Exchanger Jacket
10023486	Roomsealed Chamber
10023493	Obsolete - Connection
10023495	Siphon
10023530	Use 10026272
10023531	Siphon Plug
10023532	Locking Pin
10023533	O Ring
10023537	Printed Circuit Board - Green
10023549	Main Printed Circuit Board
10023566	Heating Flow Cock/Service Valve
10023567	C-Water inlet valve/Stop Cock - Screws into non return valve
10023568	Supply inlet valve
10023569	Non-Return/Double-Check Valve
10023570	Flexible Pipe/Filling Loop
10023571	Obsolete - Bracket

10023573	Obsolete - Pump Cable
10023574	Obsolete - Pipe
10023575	Obsolete - Pipe
10023576	Pipe
10023577	Pipe
10023578	Obsolete - Pipe
10023579	Pipe
10023580	Connection Pipe
10023582	Membrane Keypad
10023583	Obsolete - LED Light Guide
10023584	Obsolete - Diverter valve cable
10023585	Use 10024392
10023586	Flat Cable (Hydra)
10023587	Wiring M6 to DHW Thermistor (NTC3)
10023589	Obsolete - Outer casing - Hydra
10023603	Flexible Expansion Pipe
10023643	S.Valve outlet tail repl 1792
10023651	Use 20005146
10023661	Main heat exchanger Rep 20005151
10023681	Cover
10023697	Obsolete - Pipe
10023699	Washer
10023763	Display board
10023764	Use 10024393
10023772	Obsolete - Door Panel
10023774	Obsolete - Door Panel
10023798	Burner
10023799	Burner
10023805	Metal Air Box Hole Cap
10023810	Door Panel
10023812	Obsolete - Cover
10023816	LED Light Guide
10023817	Use 10030336
10023818	Use 10030335
10023822	Case
10023823	Compact 28 Case
10023834	Burner
10023836	Use 20020377
10023838	CN8 to Primary NTC,Air Press switch,High limit stat & CN4 to Fan
10023840	CN1 to M3 external connections block
10023878	Main Heat exchanger
10023891	Membrane keypad
10023892	LED Light guide
10023901	Burner
10023902	Main burner injector manifold
10023904	Air box bottom
10023907	Fan Assembly Includes Venturi
10023908	Air Pressure Switch
10023909	Rear Insulation Panel for Combustion Chamber
10023910	Front Insulation Panel for Combustion Chamber

10023928	Cover Assembly
10023931	Roomsealed Chamber
10023933	Use 20001126 - Will need to change all fascia components to fit new version
10023935	Clock bezel for 10028496 & 10023938
10023936	Use 10030336
10023937	Control Knob - Will need to change all fascia components to fit new version
10023938	Use 10028496
10023939	CN5 to Gas valve, CN2 to Pump & CN9 to Water pressure switch, Modulator, DHW thermistor & DHW Flow switch
10023940	M6 (Connections block) to Clock
10023942	Use 10027793 (log book incl)
10023945	Roomsealed Chamber
10023946	Heat exchanger
10023947	Long Pipe from Heat Exchanger
10023948	Flexible Pipe (Black Rubber Section at End)
10023949	Pipe
10023950	Pipe
10023996	Gas Pipe
10023997	Obsolete - Burner Flange
10024019	Press Gauge (Old Type) Sits Behind Control Panel
10024026	Clamp
10024035	Fan
10024037	Use 20020309
10024042	46mm Restrictor Ring
10024043	47mm Restrictor Ring
10024044	49mm Restrictor Ring
10024067	CN8 to Heat thermistor, Pressure Differential switch, DHW Flow switch & CN4 to the Fan
10024112	Siphon
10024120	M3 to Heat thermistor, High limit stat, Burner stat & PD switch (Also comes M1 to condense sensor & M12 to fan)
10024121	Use 20006403
10024125	Hood Assembly
10024126	Clamp
10024129	Short Pipe from Condense Unit
10024130	Pipe
10024131	Pipe
10024132	Use 20068881
10024133	Siphon plug
10024136	Retarder
10024137	Fan flue connection
10024140	Use 10025212
10024141	O ring
10024142	O ring
10024143	O ring
10024157	CN8 To Primary NTC, PD Switch & High Limit. CN4 to Fan
10024166	Air box side
10024173	Use 10024976
10024191	Pressure tube
10024230	Fan
10024295	Use 20015932
10024301	Heat exchanger
10024310	Flue Hood assembly

10024311	Short Pipe from Condense Unit
10024312	Pipe
10024313	Pipe
10024314	M3 to Heat Thermistor, High Limit, Burner Stat & Analogue Pressure Switch. Also includes M1 to Condense Se
10024323	Obsolete - Blanking Plate
10024326	Use 10024731
10024336	Clip
10024342	M5 to DHW thermistor, Water pressure switch & DHW flow switch
10024364	Plate (replaces S10013)
10024384	Use 1817
10024390	Main Printed Circuit Board
10024392	X1,X2,X3,X4 Near Full Loom
10024393	X1,X2 & X3 Near full loom
10024440	Use 20068882 Plastic Pipe
10024449	Use 20081537
10024462	9L Flow govenor (Orange)
10024463	NG Burner
10024464	Obsolete - LPG burner
10024466	M4 to Ignition PCB & Gas valve Wiring
10024467	Use 10027794
10024468	Linea 726/730/735 user man
10024473	Hood Assembly
10024498	Instrument Panel
10024508	Door panel rep 10024530
10024518	Pipe
10024519	Pipe
10024520	Pipe
10024521	Use 20068884
10024522	M12 To Fan, M1 to Condense Sensor, M3 to PD Switch, High Limit, Burner Stat, Primary NTC
10024524	Ng burner
10024526	Fan
10024528	Main Printed Circuit Board (Rep 10021847) & 10020907
10024530	Use 10024508
10024554	Use 20028963
10024558	Control Printed circuit board - rep 10020477
10024573	Obsolete
10024577	Fan
10024578	Main heat exchanger
10024579	Main heat exchanger
10024580	Main heat exchanger
10024627	Domestic Heat Exchanger
10024640	Use 10030114
10024641	By-pass casing
10024642	Bypass body
10024643	Cover for by-pass assembly
10024645	Automatic by-pass plug
10024646	Discharge Valve with O ring (10025064) & Washer (10025066)
10024647	Connection
10024662	Expansion vessel
10024668	Pipe

10024669	Roomsealed chamber
10024670	Combustion Chamber Front Cover
10024672	Pipe
10024673	Pipe
10024676	Front cover
10024680	LED light guide
10024681	Gear wheel
10024682	Gear wheel
10024686	Hole cover
10024687	Hole cover
10024688	Obsolete - Hole cover
10024689	CN1 To Fused Terminal Block & Control Terminal Block
10024692	Casing kit for Rain boiler
10024710	Limit thermostat
10024718	Spreader bar
10024731	Printed circuit board
10024740	Hydraulic control cable
10024742	Burner injector manifold
10024745	Air Box Bottom
10024751	Combustion chamber
10024752	Burner (NG)
10024756	Instrument panel
10024757	Front flap
10024759	Use 10027801
10024779	Cover for Air Box rep 10021568
10024794	Combustion Chamber Front (Metal)
10024799	Pipe
10024800	Pipe
10024801	Pipe
10024802	Pipe
10024957	Use 10027571
10024958	Locking Pin
10024976	Rear cover
10024982	Pipe
10024983	Pipe
10024985	Nipple
10024986	Locking Pin
10024987	Flow governor 10 Litres Per Minute (Blue)
10024988	O ring
10025055	Use 20044364
10025056	Non return valve
10025057	Pipe
10025059	Connection
10025060	Filling Cock
10025061	Use 10027351
10025062	Locking Pin
10025063	Locking Pin
10025064	O ring
10025065	O ring
10025066	Washer

10025067	O ring
10025068	Silicone Tube
10025074	Use 20035533 (R106332) (R102866)
10025080	Flow governor 12 Litres per Minute (Red)
10025188	Flexible pipe for Expansion vessel
10025212	Condensing level detector
10025270	NG Burner
10025271	Main burner injector manifold
10025304	Actuator/Motorised valve
10025305	3 way valve cartridge
10025312	Electric connections kit
10025340	Printed circuit board - Green
10025348	Pressure gauge
10025368	Wiring harness
10025370	CN4 to fan & CN8 to NTC, Limit stat & flue press switch
10025449	Curved Locking Pin
10025450	Fixing fork wrench
10025461	Injector 4.8
10025468	Fan Baffle Compact 25HE
10025485	Auto air vent bottle (Pump)
10025647	Fan Baffle
10025726	Use 20001140
10025728	Sabre 24 casing
10025731	Fixing flange
10025733	Water supply stop cock
10025739	Sabre 28 casing
10025833	Obsolete
10025839	Pipe
10025840	Pipe
10025842	Front Panel
10025891	Spark / ignition electrode with lead
10025911	Main Printed Circuit Board
10025934	Hood assembly
10025935	Combustion chamber
10025938	Fan
10025941	Combustion - Fan cable
10025961	Obsolete - Pipe
10025962	Obsolete - Pipe
10025963	Obsolete - Pump cable
10025985	Spark / ignition electrode with lead Rep 10021398
10026008	Fan Baffle Compact 29HE
10026031	Ignition transformer TR6 with wires
10026041	Flow governor 13 Litres per Minute (Olive Green)
10026042	Flow governor 15 Litres per Minute (Lime Green)
10026043	Flow governor 8 Litres Per Min (White)
10026044	Flow governor 9 Litres Per Minute (Orange)
10026045	Flow governor 11 Litres per Minute (Beige)
10026046	Flow governor 14 Litres per Minute (Pink)
10026050	Thermo-Pressure gauge
10026071	Obsolete - Instrument panel

10026097	Plug
10026098	CN5 to Gas Valve, CN9 to water pressure switch & modulator & CN2 to Pump Wiring
10026102	Burner
10026116	Cover
10026164	Case
10026179	Casing - Compact 29HE / Procombi 100HE
10026193	Pipe
10026194	Use 20092620
10026203	Casing - Sabre 25 HE
10026228	Pipe
10026230	Roomsealed chamber cover
10026231	Roomsealed chamber side
10026232	Test Point Cap
10026236	Transformer with wires that connect onto CN01
10026237	Use 20002969
10026238	Use 10029365
10026239	Cover assembly
10026240	Use 20007052
10026241	Casing
10026247	Pressure gauge
10026264	Pipe
10026265	Obsolete - Pipe
10026266	Obsolete - Pipe
10026267	Pipe (Rep 10027317)
10026268	Obsolete
10026269	Clip
10026272	Flexible Pipe
10026273	Use 20081926
10026275	Use 10029306
10026309	Use 10028420
10026310	Use 20007053
10026311	Use 10028421
10026316	Sensing electrode
10026317	Use 10028204
10026318	Gas pipe
10026322	Washer
10026323	Washer
10026324	O ring
10026325	O ring
10026328	Glass assembly
10026329	Silver Metal Bracket for Conveyor on Linea HE
10026330	Wiring J15 & CN3 to M10 connector (external sensor/U.H.T)
10026331	J9 to Motorised Valve (With the second pump connection for underfloor htg etc)
10026332	CN02 to Fan & CN1 to Condense sensor,Flow thermistor & return thermistor (now with J12 & condense sensor,
10026333	J3 Mains terminal block & wires
10026335	Obsolete - Low tension cable
10026336	J10 to Gas valve cable
10026337	CN01 to Fan transformer
10026338	J8 to Pump Wiring Harness
10026339	Use 10028363

10026341	Ribbon Cable
10026342	Cable Connector
10026345	Washer
10026346	Silicone pipe
10026355	Combustion chamber cover
10026359	Venturi
10026366	Washer
10026372	Hood Assembly
10026384	Cover
10026404	Printed Circuit Board (Small)
10026405	Obsolete - Hood assembly
10026406	Obsolete
10026407	Fan
10026408	Combustion - Fan cable
10026409	Use 10027795 (log book incl)
10026412	Obsolete - Pipe
10026413	Obsolete - Pipe
10026422	Pipe
10026423	Pipe
10026424	Pipe
10026429	Opentherm ribbon Cable
10026475	Use 10027599
10026491	Use 10028202 (expl diag incl)
10026494	O ring
10026506	Heating manifold
10026507	Valve
10026508	Htg manifold & cartridge (3 P V kit)
10026545	Pipe
10026547	Linea HE ht exch (Special)
10026548	Use 10028537
10026552	Pipe
10026558	TSC1 (ignition transformer) to Spark electrode Wiring
10026671	Fixing Flange
10026686	Connection band CN4 to J1 on display PCB
10026698	Use 10028203
10026701	Obsolete - Pipe
10026703	Gas Pipe
10026721	Thermostat
10026771	Use 10026098
10026791	Clamp
10026796	Fan Gasket
10026857	Fitting/Union
10026866	Casing
10026933	Block with combustion analysis check
10026982	Limit stat
10026983	Use 10027360
10027015	Use 20000773
10027040	Flexible pipe
10027051	Fan
10027089	Tryton

10027132	Use 10028142
10027135	Pressure gauge
10027146	Pipe
10027158	CN2 to W Pressure sensor, DHW Flow switch, DHW temperature wiring
10027159	LPG Injector (3.6)
10027161	LPG to NG jet (6.7)
10027162	NG jet (7.0)
10027175	Air box bottom
10027187	Use 20039202
10027190	Use 10028405
10027191	Pipe
10027192	Flexible pipe
10027193	Washer
10027196	Use 10028206
10027200	Driver PCB
10027258	Pump
10027316	Fan
10027317	Use 10026267
10027318	Use 20020179
10027320	Pipe
10027321	Use 10029458
10027335	Pressure reducing valve
10027343	3 way htng man & cartridge
10027351	Thermistor/NTC Sensor
10027352	Thermistor/NTC Sensor (20004978)
10027360	J12 Link wire between heat exchanger thermostat & flow overheat stat
10027370	Use 20002906
10027408	Mixer
10027410	Insulation kit
10027502	Compact HE 25/29 inst man
10027533	Air Box Bottom
10027535	Condense Pressure switch
10027536	NG burner
10027537	Gas pipe
10027538	Pitot pipe from venturi kit 01005405
10027540	Condense Unit Washer
10027541	Pipe
10027542	Pipe
10027543	Use 20066456
10027544	Pipe
10027545	Flexible pipe
10027546	Siphon
10027547	Use 20001102
10027549	Use 20001101
10027553	88mm Restrictor ring (100-88)
10027554	40mm Restrictor ring (80-40)
10027555	45mm Restrictor ring (80-45)
10027558	Wiring harness
10027559	CN4 to Fan & CN8 to Heat Thermistor, PD switch & high limit stat wiring
10027562	Air box bottom

10027564	NG Burner
10027566	Pipe
10027567	Pipe
10027568	Use 20066460
10027569	82.5mm Restrictor ring (100-84)
10027571	Pump
10027578	Cover
10027580	Sabre HE combi user guide
10027581	Use 10028019
10027599	Cover assembly
10027620	Spark/Ignition electrode Replaced
10027685	Connections cover
10027709	Pipe
10027712	Use 20001141
10027713	Wiring harness
10027739	Gas pipe
10027742	Pipe
10027757	Locking Pin
10027758	Hydraulic control cable
10027768	Heating manifold & Cartridge
10027806	3/4" gas cock
10027807	Obsolete - Heating cock
10027841	Pipe
10027845	Flange Ø 42
10027864	Spark/ignition electrode
10027896	Pipe
10027898	M12 to Fan & M3 to Heat thermistor, high limit stat and Air pressure switch
10027913	CN4 to Fan & CN8 to Heat Thermistor, PD switch & high limit stat wiring
10027949	Front Panel
10027952	J9 to M2 Second Pump
10027953	Wiring harness
10027975	Pipe
10027990	Pipe
10028002	White Caps
10028011	Air Box Bottom
10028013	NG Burner
10028014	Gas pipe
10028015	Use 20066463
10028016	Casing Sabre 35 HE
10028025	Case - Compact 35HE
10028045	Compact HE inst man (25,29,35)
10028141	Water Pressure switch
10028142	Pressure Transducer Rep 10027132
10028155	Pipe
10028203	Gas pipe
10028204	Pipe
10028206	Gas Pipe Replaced 10027196
10028263	Use 20019769
10028264	Use 20020179
10028341	Room sealed chamber

10028345	Cover for air box
10028363	Wiring harness/condense sensor Rep 10026339
10028393	Obsolete - Casing
10028405	Siphon
10028415	Heating manifold
10028420	Air gas conveyor
10028421	Flue drain connection Replaced 10026311
10028422	Flame detection electrode
10028423	Gas pipe
10028424	Use 10030381
10028425	Tryton
10028426	Washer
10028427	Use 10028904
10028428	Pipe
10028429	Use 20020182
10028430	Air bleeding connection Pipe
10028431	Cock
10028432	Casing
10028447	Air box bottom
10028448	Casing
10028451	Use 20019250
10028454	PCB
10028456	Fan
10028467	Electrode
10028474	Use 20001103
10028475	Knob
10028476	Knob
10028477	Timer carier
10028479	Room sealed chamber
10028482	Spark Electrode Cable
10028492	Pipe
10028493	Pipe
10028494	Pipe
10028495	Pipe
10028496	Mechanical Timer (Rep 10023938)
10028503	Blanking plate
10028506	Pipe
10028515	Use 20019766
10028516	Use 20019766
10028517	Pipe
10028531	CN3 to Motorised Valve,CN2 to Pump,CN5 to Gas Valve&Solenoids&CN9 to Pres Switch,Condense Pres Switch,
10028533	Tube
10028535	Expansion vessel
10028536	Use 20008306
10028537	Burner (Rep 01005458 and 10026548)
10028538	Use 20039202
10028539	Condensing pipe
10028540	Condensing pipe
10028551	Instrument panel
10028553	Use 10030136

10028554	Cover assembly
10028557	LED light guide
10028558	Use 20008307
10028559	Knob assembly
10028593	X2 to M4 to open therm plus connection & external sensor Wiring
10028594	CN5 to Pump Wiring harness
10028595	X4 to Fan Signal Control, FA2 to Condense Sensor & Sense Electrode
10028596	Wiring CN1 to M5 room thermostat & M3 terminal block
10028597	Earth connection
10028598	Wiring X16 to Water pressure switch
10028599	Wiring CN3 to Gas valve & solenoids
10028600	Wiring CN1 to Fan power supply, CN2 to ign transformer
10028601	X9 to M3a Terminal Strip, Return NTC & Flow
10028603	Pipe
10028617	Pipe
10028618	Use 10028906
10028620	Gas pipe
10028623	Use 20007053
10028625	Use 10028905
10028626	CN1 To Fan Power Supply, CN2 to Ign Transformer
10028628	Gas pipe
10028629	Gas pipe
10028631	Pipe
10028632	Instrument panel
10028633	Wiring CN5 to Pump & 3 way motor
10028634	Wiring X16 to Water pressure switch, DHW flow switch & DHW temp thermistor
10028642	Burner
10028643	Pipe
10028747	Pipe
10028809	Frame assembly
10028811	Expansion vessel
10028812	Distributor
10028813	Gas pipe
10028814	Gas pipe
10028815	Gas pipe
10028816	Pump 15-60
10028817	Pipe
10028818	Pipe
10028819	Pipe
10028820	Pipe
10028824	J15 to M10 Block to CN3
10028825	Wiring CN2 To DHW NTC, DHW Flowswitch, Water pressure sensor
10028826	Wiring CN1 TO NTC1, NTC2, Condence sensor, J12 to overheat stats, CN02 to fan
10028827	Wiring Mains terminal block to J3 & wires
10028828	Wiring CN2 To DHW NTC, DHW Flowswitch, Water pressure sensor
10028829	Wiring J10 To Gas Valve
10028831	Wiring
10028834	Frost protection resistors
10028839	Door panel
10028865	Combustion cable

10028868	Gas pipe
10028869	Gas pipe
10028880	REC07 interface PCB
10028890	Flame control ignition module (Rep 10022174)
10028891	Ignition module (Rep 10021848)
10028894	Quick primer pressure gauge
10028899	Buner NG
10028902	Case clips
10028903	Case clips
10028904	Pipe
10028905	Pipe
10028906	Pipe
10028996	Use 20028963
10029007	Pipe
10029032	Wiring M2 to External Pump
10029105	Water gauge carrier
10029107	Wiring Harness
10029108	Wiring Harness
10029209	Injector (5.7)
10029212	Use 20007052
10029279	Expansion vessel
10029296	Pipe
10029305	Gas pipe
10029306	Auto air vent (Brass) Replaced 100618
10029365	Display Panel - Replaced 10026238
10029415	Instrument panel
10029417	Door panel
10029420	Printed circuit board
10029421	Pressure gauge (New Type) - Hole Completely Cut Out
10029422	Actuator cable
10029423	Pump cable
10029424	M16 to Connection Block & Clock, Fuse Block & Fly Lead
10029425	Gas valve cable
10029426	Combustion cable
10029427	Control cable
10029429	Combustion cable
10029442	Pipe
10029443	Pipe
10029457	Use 20019769
10029458	Use 20020179
10029470	Main Printed circuit board
10029515	Use 20020182
10029526	Connection
10029574	Blanking plate
10029585	Badge
10029590	Pipe
10029591	Pipe
10029592	Pipe
10029607	Gas pipe
10029715	Use 20081926

10029717	Main Printed Circuit Board
10029757	Heating Cock 28mm
10029823	Glass flange assembly
10029850	Pipe
10029961	Pipe
10029963	Gas pipe
10029965	Safety valve P & T
10029967	Fixing flange
10029968	Nipple
10029969	Boiler outlet tube
10029975	Pipe
10030114	Connection
10030117	NG burner
10030123	Pipe
10030124	Knob
10030125	Knob assembly
10030126	Door panel
10030136	Door flap
10030214	Support
10030255	Door panel
10030311	Hanging bracket
10030335	Temperature control knob
10030336	Selector Knob - Will need to change all fascia components to fit new version
10030381	Gas pipe rep 10028424
10030433	Dual Printed circuit board - Red
10030440	Pipe
10030505	Dual Printed circuit board - Red
10030506	Test point plugs
1006	Bolt head Screw
100618	Use 10029306
1007040	Flexible pipe
100940	Use 48382
1011	Obsolete - Flow Pipe
1012	Obsolete - Flow Pipe
1013	Obsolete - Flow Pipe
1014	Use 1191
1016	Insulation Panel
1018	Use 10022853
1019	Burner Gasket
1022	Washer Ring
102402	Use 1859
102403	Use 1860
1028	Obsolete - Wiring Harness
1029	Obsolete - Wiring Harness
102921	Linea Max HE Flue Tee
102965	System return pipe
103277	Closing pin
1033	Cover for condensing assembly
1035	Front Panel for Air Box
103539	Key

1037	Obsolete - P.C.B. Cover
1041	Obsolete - Velcro Fastener
104199	Use 078617
1042	Obsolete - Dist Manifold
104268	Non Return Valve
1044	Electrode
1045	Pump Cable
104654	Outside probe
1048	Obsolete - Transformer
1050	Use 10020438
105852	Solar Grey(Cylinder) Probe SPF 1000
105898	Main wiring
105899	Master wiring
105900	Slave wiring
105901	Ignition cable
105902	Bend
105903	Burner head silicone gasket
105904	Use 20102262
105906	Green on off switch (oblong)
105907	Round green on off switch
105908	Gasket/screw kit for venturi
105910	Flue gas analysis test point with plug (Rep B81515)
105911	Bulkhead connector for the condensate
105912	Cock
105913	Use B81511
105914	Ignition/detection electrode
105915	FE flange for exchanger pipe
105916	Silicone gasket for ignition plu
105917	Viton gasket
105918	Use 20049127
105919	Condensate drain trap quick fit
105920	Pijenburg master board
105921	Use 107934
105922	Use 7236
105924	Temperature probe
105926	Thermostat
105930	Air vent valve
105931	Fan
105932	Venturi
105965	Upper Front Panel
105966	Front Panel
105967	Front panel
105968	Right Panel
105969	Left panel
105970	Gas Pipe
105971	Gas Inlet Pipe Condexa Pro
105973	Instrument Panel
105974	Panel & Cover Slave
105975	Top Rear
106250	Gas valve

106252	Pressure diff switch
106254	Serial cables
106277	Detector
106323	Use 10022556
106324	Condense drain pipe
106325	Use 10027546
106326	Control Panel Complete
106327	Management board
106328	Complete wiring
106330	Use 10023568 (Small V) & 10023566 (large V)
106331	Use 10025188
106333	Use 2573
106334	Instrument panel cover
106335	Wiring
106336	Condensate drain pipe
106337	Pipe
106338	Safety valve
106339	Pipe
106368	Gas Pipe
106513	Collector & tank probe
106791	Master board (Incorrect Board use R107584)
106792	Master Box
106847	Instrument Panel
106849	Digital display frame assembly
107180	Condexa pro lpg con kit 2 washers 6.5 and 6.75
107393	Ignition/detection electrode
107428	Use 105919
107529	Use 10023566 (L) & 10023568 (S)
107584	Master board Replaced R106791
107934	Pijnenburgh slave board
1095	Wiring M3 to thermistor, High limit stat & Air pressure switch
11300	Screw
11304	Obsolete - Screw
11305	Use 1890
11322	Obsolete - Cover
1133	Obsolete - Back Frame
1140	Use 7315
1141	Fan Flue Connection
1191	Siphon
1192	Siphon pipe
1193	Front Insulation Panel
1194	NTC Sensor
1195	Main burner support
1196	Main Burner
131ZEB3A	Obsolete - LPG Conv Kit Meteor
1321	Flow governor (Green)
1322	Flow governor
1329	Expansion vessel
1439	Obsolete - Pressure Switch
1440	Bracket

1453	Baffle
1457	Silicone tube (1 Metre)
1466	Flow governor (Blank)
1488	Flow Switch / Actuator
1489	Water filter
1490	Use 1488
1493	Input P.C.B.
1494	Obsolete - Wiring Harness
1495	Obsolete - Wiring Harness
1498	Front Flap (New Linea)
1531	Use 10020216
1547	3 Core Fly Lead
1548	Cover for Air Box
1549	Air Chamber Side Panel Rep 1878/48928
1552	Valve For DHW Bypass
1592	3/4" Heat water cock
1604	Flow governor (White)
1606	Obsolete - Air Box Bottom
1607	Obsolete - Air Box Bottom
1631	Use 8460
1639	Obsolete - Control Panel
1642	Obsolete - Bracket
1650763	Obsolete Hydra/Pinnacle heat engine
1704	Obsolete - Air Vent
1730	Obsolete - Eclipse ESC PCB NG
1731	Obsolete - Eclipse ESC PCB NG
1732	Obsolete - Eclipse ESS PCB NG
1733	Obsolete - Eclipse ESS PCB
1734	Heating By-pass Valve
1749	Water Stop Cock
1777	Obsolete - Upright Frame (left)
1778	Obsolete - Upright Frame (Right)
1779	Use 10022125
1780	Internal clock wire
1781	Obsolete
1783	Hanging bracket
1783A	Obsolete - Hanging Bracket
1784	Obsolete - Plate
1785	Obsolete
1786	C-Water inlet valve/Stop Cock - Stands alone
1787	Gas Cock
1788	Heating Flow Cock/Service Valve
1789	Heating Cock 22mm (Washers are 5237)
1790	Connection Rep 088128
1791	Double Non Return Valve
1792	Use 10023643
1793	Brass Nut Rep 088131`
1794	Flexible Pipe/Filling Loop
1806	Safety Valve (Push Fit)
1807	Use 20007057

1816	Obsolete - Dist Manifold
1817	Hanging bracket - Replaced 10024384
1820	Clip
1821	Olive (Small)
1822	Olive (Large)
1823	Nut (Small)
1824	Nut (Large)
1828	Obsolete
1829	Expansion Vessel Plate
1830	8 Litre Expansion Vessel (Inc pipe)
1831	Use 2127
1832	Use 1913
1835	Electrode Seal
1836	Use 20033533
1837	Ignition Box
1838	Spark Electrode with lead
1839	Gas Pipe (requires 1840 too)
1840	Pipe (requires 1839 too)
1841	Use 01005245
1842	Hood Assembly
1843	Air Baffle (Left)
1844	Air Baffle (Right)
1845	M15 to Pump Wiring
1846	Pipe
1847	Pipe
1848	Pump Pipe replaced 10023195
1849	Obsolete - Pipe
1850	Expansion Vessel Pipe
1851	Use 10021951
1852	Door Panel
1853	Use 10024528
1854	Use 10024558
1855	Use 10021849
1856	Obsolete - Cover
1857	Pressure Gauge
1858	Green to Red LED
1859	temp control knob htg&dhw
1860	dhw/htg Mode selector switch
1861	Cap
1862	Spring
1863	Use 10023044
1864	Clip
1865	Adhesive Film
1866	Adhesive Film
1867	Pin/Screw for Control Panel
1868	Obsolete - O'Ring
1869	O'Ring
1870	M12 to Fan Wiring
1871	Wiring M3 to Primary thermistor, High limit stat & AP Swith
1872	Wiring M5 to DHW thermistor, Boiler flow switch & DHW Flow switch

1873	Wiring M11 to Motorised valve
1874	Wiring to CVI - M4 & M14 to Gas valve, Mod coil & ign box
1878	Use 1549
1879	Use 1531
1880	Case
1881	Locating Clip R/H
1882	Locating Clip L/H
1888	Water supply stop cock
1890	Clip
1895	Terminal Board
1901	Obsolete - Clip
1910	Obsolete - Expansion Vessel Pla
1912	Use 2073
1913	Guard Replaced 1832
1914	Use 01005246
1915	Obsolete - Fan Baffle
1916	Obsolete - Fan Baffle
1917	Use 10023202
1918	Obsolete - Pipe
1919	Use 10022015
1920	Use 10020217
1922	Obsolete - Case
1931	Use 1838
1947	1AM Fuse (Individual)
1955	Expansion Vessel
1956	Flow governor (Pink)
1957	Domestic Heat Exchanger
1959	Combustion Chamber
1960	Obsolete - Burner
1964	Electrode
1966	Gas Pipe
1967	Obsolete - Main Heat Exchanger
1968	Hood Assembly
1969	Obsolete - CombustionChamberAss
1970	Obsolete - Comb Chamber Cover
1971	Air Baffle
1972	Obsolete
1973	Front Panel
1974	Back Combustion Panel (Linea P
1975	Pipe
1978	Obsolete - Vokera Logo
1979	Obsolete - Trade Mark Label
1980	Clock Wire
1987	Distribution Manifold
1988	Heat Exchanger Jacket
1996	Control Panel Flap
18700005	Washer
20000118	Drain plug
20000120	Flange for fan
20000121	Rear instrument panel

20000122	Casing
20000123	Conveyor
20000124	Instrument panel
20000125	Gas pipe
20000126	Use 20020255
20000127	Pipe
20000128	Pipe
20000129	Air bleeding connection Pipe
20000130	Spring clip
20000131	O ring
20000132	Flexible pipe
20000133	Flexible pipe
20000134	Pump cable
20000135	Combustion cable
20000136	CN1 to M3A, M3 and Fan
20000137	Gas valve cable
20000138	CN2 to Ignition Transfirmer
20000140	Air box side
20000141	Condensing exchanger assembly
20000142	Top flue outlet blanking cap
20000143	Drain plug
20000148	Burner
20000168	Instrument panel
20000498	Use 20007052
20000533	Cock
20000539	Clip
20000692	Insulation Panel
20000713	Detector Replaced 20075973
20000761	Cover
20000762	Wiring X2 to M4 (OT & external sensor)
20000763	Pump cable
20000764	Low tension cable
20000765	Combustion cable
20000767	Gas valve cable
20000768	CN1 to Fan, Ffused block and Controls block
20000769	Pipe
20000773	Instrument panel
20000774	Door Panel
20001003	Protection
20001101	Instrument panel cover Rep 10027549
20001102	Instrument panel
20001103	Instrument panel
20001116	Use 20008307
20001126	Instrument panel - If rep 10023933 - change fascia components as well
20001140	Instrument panel
20001141	Instrument panel
20001560	Ignition cable
20001563	Use 20002969
20001564	High limit stat (With Clip)
20001617	Combustion fan cable

20001681	CN1 to Fan Power Supply, CN2 to Ignition Transformer
20001873	Use 20002906
20002045	Ignition Cable
20002906	Pump rep 2225 & 20001873
20002969	Ignition transformer with wires Rep 10026237 & 20001563
20002995	Fan
20003181	Water pressure switch - Replaced 10028141
20003819	Use 20081926
20004365	Use 20081926
20004832	Use 10027352
20004978	Use 10027352
20005146	Use 20052572
20005150	Use 10021419
20005151	Use 10023661
20005205	Control Panel
20005544	Heat exchanger
20005546	Spring Clip
20005549	Cap smoke analysis
20005550	Plug
20005551	N.G. burner
20005552	Washer
20005553	Gas pipe
20005554	Gas pipe
20005556	Pipe
20005557	Pipe
20005558	Pipe
20005559	Pipe
20005560	Front insulation panel
20005561	Back insulatin panel
20005562	Insulation panel
20005566	O ring
20005568	Heating distrib.
20005569	Printed circuit board MP08
20005571	Low tension cable
20005572	Use 20035405 Wiring Harness CN2 to M3 mains connection, pump & gas valve
20005574	Cover
20005575	Knob
20005579	Knob
20005580	Quick primer pressure gauge
20005582	Pump
20005584	NG Burner Injector Manifold
20005585	High limit stat
20005586	Plastic Hole cover
20005591	Frame
20005594	Combustion chamber cover
20005595	Kit cable grommet
20005596	Flue draught diverter
20006403	Condensing level detector cable Replaced 10024121
20006411	Fan baffle
20006423	Casing

20007047	Heat Exchanger Jacket
20007050	Flue sensor
20007052	Main Printed circuit board
20007053	Conveyor
20007057	Heat exchanger jacket (Rep 1807)
20007692	Cover
20007783	Heating by-pass valve
20007784	Gas valve
20008306	Conveyor Replaced 10028536
20008307	Main Printed circuit board
20008788	Sonda Di Temperatura
20010331	Condensing Pipe
20010682	Pump 32-80
20011042	Clip
20011043	Connection
20011048	Fumes connection
20011082	Instrument panel
20011392	Casing cover
20011393	Case assembly
20011402	Pump
20011403	Gas cock
20011411	Frame Assembly
20011419	Use 20052578
20011420	Pipe
20011421	Pipe
20011422	Pipe
20011423	Pipe
20011424	Printed circuit board
20011443	Printed circuit board kit
20011449	CN8 - J1 Display Wiring Harness
20012544	Low tension cable
20012937	Flexible Pipe
20012949	Frame Assembly
20013055	Knob
20013140	Pipe
20013349	Combustion cable
20013350	Low tension cable
20013352	LED light guide
20013353	Pipe
20013354	Ignition transformer
20013582	Front Insulation Panel
20013583	Back Insulating Panel
20013968	DHW Actuator
20014025	Control Knob
20014074	Connection
20014873	Pipe
20014882	Water gauge carrier
20014884	Light guide
20014885	Pressure gauge
20014887	Heating Contorl Knob

20014888	Hot Water Control Knob
20014891	Instrumental panel
20014920	Frame
20015932	Mixer Replaced 10024295
20016279	CN2 to Water Pressure Switch, Flow meter & DHW NTC
20016280	Ignition Flame Wiring Harness
20016282	J13 to flame sensor, CN1 to flow/return NTC's, J12 to flow overheat stat, J24 to fan (LV) & J7 to condense/flame
20016283	Printed Circuit Board
20016328	Burner Assembly
20017585	Metal Combustion Chamber Cover
20017591	Pipe
20017592	Pipe
20017594	Actuator/Motorised valve
20017596	CN4 to Motorised Valve
20017597	Use 20043594
20017598	Square Locking Pin
20017599	Valve with cartridge
20017785	Hanging bracket
20017899	Detector
20018986	Casing
20019250	Casing - Unica 32HE & 36HE
20019506	LPG to NG Conversion Kit
20019507	NG to LPG Conversion Kit
20019763	Pipe
20019764	Pipe
20019765	Pipe
20019766	Air bleeding connection Pipe (Rep 10028516 & 10028515)
20019767	Locking Pin
20019768	Auto air vent (Black)
20019769	Flow Pipe assembly (Rep 10029457)
20019888	Air Separator
20020178	Air bleeding connection Pipe
20020179	Flow Pipe Assembly Rep 10029458 & 10027318
20020181	Air bleeding connection Pipe
20020182	Flow Pipe Assembly (Rep 10029515)
20020192	Pipe
20020252	Pipe
20020254	Pipe
20020255	Flow Pipe Assembly replaced 20000126
20020300	Frame assembly
20020309	45mm restrictor ring rep 10024037
20020310	Flue flange Ø 47
20020311	Flue flange Ø 43
20020377	42mm restrictor ring
20020899	Pipe
20020900	Pipe
20021032	Combustion cable
20021496	3 way htg manifold & cartridge
20021497	3 Way Manifold & Cartridge
20021548	Pressure connection

20021597	Fan support kit
20022564	CN5 to Pump & 3 Way Valve motor
20023928	Fixing flange
20024086	Spring Clip
20024202	Pump Cable
20024205	Printed Circuit Board
20024206	Hydraulic control cable
20024419	Use 20029826
20024559	Pressure Transducer
20024591	Condensing Exchanger Assembly
20024600	Gas Pipe
20024841	3-Way Valve Motor
20024869	O Ring
20025687	Signal amplifier
20025733	Siphon
20025734	Use 20113021
20025735	Use 20069541
20025736	CN1 to Ign Transformer, CN3 to Fan, CN10 to Fan & CN11 to Flow/Return NTC's, Flue NTC & High Limit Stat
20025737	Ignition electrode with Lead
20025738	Electrode
20025740	Seal for Ignition electrode
20025743	Pipe
20025744	Flow Pipe Assembly
20025745	Pipe
20025746	Air bleeding connection Pipe
20025747	Washer
20025752	Use 20039202
20025753	Washer
20025755	Copper Pipe from Safety Valve
20025756	Copper Tail 15mm
20025757	Copper Tail 22mm
20025758	Copper Pipe (L Shape)
20025760	Suction pipe
20025761	Mixer
20025762	Use 20039953
20025763	Pipe
20025764	Pipe
20025765	Use 20039923
20025880	Pump
20025881	Pipe
20025883	J9 to divertor actuator & M2 (secondary pump)
20025884	Pump Cable
20026048	Compact 25 A Instrument Panel
20026049	Outlet nut
20026051	Diaphragm
20026055	Control Panel Cover
20026056	Flue collector
20026058	Test Point Cap
20026059	Washer
20026060	Conveyor

20026061	Complete Burner Assembly
20026073	Casing
20026079	Burner assembly
20026080	Compact 29 A Instrument Panel
20026081	Use 20039924 Exchanger Assembly
20026082	Diaphragm
20026083	Mixer
20026585	Control panel
20026586	Use 20039202
20026587	Wiring J3 to M3 230v mains connector & M6 connector block (TA link)
20026589	Casing
20026724	Fan kit
20026728	Fixing flange
20028324	N.G. burner
20028325	Collector
20028661	CN4 to divertor actuator
20028731	Safety Valve
20028732	Pipe
20028733	Pipe
20028734	Pipe
20028736	Pipe
20028737	washer
20028738	Pipe
20028739	Conveyor
20028740	Pressure Switch
20028741	Mixer
20028742	Washer
20028744	O Ring
20028745	Stub Pipe
20028746	washer
20028747	Stub Pipe
20028748	Cover
20028749	Pipe
20028750	Pipe
20028752	Pipe
20028759	Suction Pipe
20028760	Flexible Pipe
20028761	Flexible Pipe
20028762	NG Injector
20028763	Burner Assembly
20028765	Condensing Exchanger Assembly
20028769	Cover
20028776	Case Assembly
20028780	Knob
20028781	Expansion Vessel
20028782	Frame
20028783	Quick Primer pressure guage
20028904	Nipple
20028963	PCB Replaces 10028996 & 10024554
20029043	LPG to NG Conversion kit

20029052	LPG to NG Conversion kit
20029055	Use 20113110
20029826	Expansion vessel Rep 20024419
20029985	DHW Actuator
20030209	Venturi kit (Repl 01005405)
20030334	Airbox
20031414	LPG to NG Conversion Kit
20031415	LPG Conversion Kit
20031497	Mixer (Red)
20031569	Use 20030209
20032150	LPG to NG Conversion Kit
20032155	NG TO LPG Conversion Kit
20032553	Use 20019888
20033722	Tank Condensation Collecting
20034037	3 way htg manifold with cartridge (10026508) & motorised valve (20024841) Complete
20034320	Expansion Vessel
20035019	Air Vent bottle
20035390	Pipe
20035391	Gas pipe
20035392	Cover assembly
20035393	Pipe
20035394	Cock
20035397	Case Assembly
20035404	CN9 to DHW Flow Switch, DHW NTC & Water Pressure Switch
20035405	CN2 to M3 Mains Connection, Clock Harness, Pump & Gas Valve (With Tyco lead) RePLACED 20005572
20035501	Instrumental panel
20035502	CN9 to Water pressure switch
20035533	Gas valve - Relaced 10020574 & 10021021
20035608	Control panel
20035609	Pipe
20035613	Case Assembly
20035648	Filing Cock Knob
20035649	Filling cock
20035912	Cover
20036112	Pump
20036120	Pipe
20036537	Tryton Retarder
20036547	Use 20115425
20036548	Flow Switch
20036549	Use 20104238
20036551	Inlet Water Pipe
20036552	Outlet Water Pipe
20036553	Compressor
20036554	Compressor Protection Module
20036555	Condenser
20036556	Inverter Module
20036564	Use 4026256
20036581	Inverter Module
20036582	Outlet Water Pipe
20036583	Condenser

20036585	Straightener
20036586	Liquid Assy
20036587	Condenser
20036588	Front Panel
20036607	Motor
20036608	Condenser
20036609	Compressor
20036610	Accumulator
20036611	Magnetizing Coil Valve
20036612	4 Way Valve
20036613	Logical PCB
20036614	Liquid Assy
20036630	Thermostat
20036700	External probe
20036990	Mixer Spacer
20038366	CN2 to Water Pressure Switch, Flow meter & DHW NTC
20038577	Unica I (Non-ERP) Air box
20038597	Combustion Chamber Cover
20039151	Pipe
20039152	Pipe
20039153	Pipe
20039202	Gas valve Rep 10028538 & 10027187 & 20025752
20039204	Gas Diaphragm
20039359	Glass kit
20039402	M6 to CN6 & CN5
20039923	Exchanger Assembly rep 20025765
20039924	Exchanger Assembly rep 20026081
20039926	Pump Kit
20039953	Flow Connection for Compact A
20039954	Return Connection for Comact A
20040102	Flue drain connection
20040474	Gas Pipe
20040675	Gas Valve Solenoid (Fits 20039202/20035533)
20040979	Cock
20040980	CN2 - Mains terminal block, Pump, Water pressure switch & Gas valve Wiring Harness
20040981	CN4 - M3A Wiring Harness
20040982	CN1 - Ign transformer + FA1 Wiring Harness
20040983	CN10 - Fan Wiring Harness
20040984	CN9 - Water Pressure Switch + Cylinder Stat
20040985	Instrument panel
20040986	Pipe
20040987	CN3 - Fan Wiring Harness
20040988	CN11 - High limit, Flow NTC, Return NTC, Flue stat, UFH stat & FA2 - Flame sensor Wiring Harness
20040989	CN6 - M6 Wiring Harness
20040990	Pump
20040999	Frame assembly
20041000	Case Assembly
20041049	Case
20041051	Fixing Door
20041053	Instrument Plate

20041058	Diaphram
20041473	Diaphragm
20042113	Knob
20042114	Knob
20042115	Pressure gauge
20042121	Use 20060938
20043496	By-pass valve
20043523	Ionisation Electrode
20043524	Burner assembly 25 kW (Ceramat)
20043594	3 way valve cartridge Rep 20017597
20043658	Front Right Panel
20043659	Front Casing
20043820	Use 20044364
20044364	Safety valve Rep 10025055 & 20034917 & 20043820
20044890	Lateral insulation panel
20044892	Burner 25 kw (Ceramat) and top gasket (20116624)
20044894	Burner Gasket
20044895	Exchanger cover
20044896	Burner
20045328	Use 20020179
20045568	LPG to NG conversion Kit
20045569	NG to LPG conversion kit (3.9)
20046189	Water Pressure Switch Replaced 2214
20046265	Washer
20046266	Cover
20046269	Burner (New type Worgas)
20046270	Protection
20046560	Pressure switch same as 2726?
20046652	Panel
20046835	Flange and Insulation
20046836	Tryton with 3 Screws
20046837	Flange and Insulation
20046839	Tryton and Screws
20047573	Flue gas flange
20047802	Washer
20047807	Burner Flange
20047811	Ring Closing
20047812	Insulation
20047819	Washer
20047820	Sealant
20048263	Heat Exchanger shell
20048269	Heat Exchanger shell
20048271	Container Exchanger
20048272	Exchanger shell
20048322	Case Assembly
20048779	3 way valve
20049127	Exchanger
20049604	NTC Sensor
20049606	Plug/Hole Cover
20049608	Condexa Pro Flue Stat adaptor cable

20049611	PCB Kit
20049613	Spark/Ignition Electrode
20049617	Quick primer pressure gauge
20049618	Frame Assembly
20050373	Low Tension Cable
20050374	Cover Assembly
20050376	Door Panel
20051029	Use 20101332
20051418	Heat Exchanger Support Bracket
20052519	Gas Pipe
20052572	Main heat exchanger Rep 20005146 & 10023651
20052578	Main Heat Exchanger Repaced 20011419
20055213	NG Jet
20055216	Burner 29kw (Original Ceramat) and top seal (20116625)
20055396	Use 20109417
20055453	Conveyor
20055454	Use 20069541
20055455	Timer/Display Module
20057326	Control Panel Cover (Rear)
20057328	Case Assembly
20057330	Knob
20057331	Front Panel
20057332	Wiring Harness CN8 to M2 to Clock & CN5.
20057346	Front Panel
20057350	Led light guide
20057351	Front Control Panel
20057394	Combustion wiring
20057395	Low tension wiring - ERP
20057751	Use 20113104
20057833	Frame assembly
20057834	Case Assembly
20057837	Front Panel
20057854	Condensing exchanger assembly
20057855	Gas Pipe
20057856	Use 20119995
20057857	Use 20119996 Detection electrode
20057858	Tryton
20057859	Pipe
20057861	Pipe
20057862	Pipe
20057864	Pipe
20057865	Pipe
20057866	Pipe
20057868	CN9 to DHW flow switch, DHW NTC & Water pressure switch
20057870	Washer
20057871	Washer
20057872	Glass Fibre
20057873	Flow Pipe Assembly
20057874	CN1 to ign transformer, CN3 to fan.
20057875	CN2 to M3 mains connection, clock harness, pump & gas valve + 3 core fly lead

20057876	CN10 to fan & CN11 to flow/return NTC's, Flue NTC & high limit stat
20057878	Washer
20057880	Conveyor
20057882	Top flue outlet blanking cap
20057885	Air/gas manifold
20057887	Burner assembly
20057889	Washer
20057895	Hanging Bracket
20057896	Support kit
20058630	Use 20123398
20058631	Front Panel
20058633	Burner Assembly
20058634	Pipe
20058635	Pipe
20058636	Support Kit
20059926	Use 20042114
20060133	Frame Assembly
20060559	Slave wiring Harness
20060560	Power wiring harness
20060561	Slave PCB
20060564	Ignition cable
20060566	Ignition electrode
20060569	Fan
20060571	Gas valve
20060573	Connector
20060574	Delivery manifold
20060575	O-ring - Obsolete
20060598	Cock
20060601	Hose
20060676	Clip
20060677	Clip
20060679	Gas pipe
20060682	O-ring
20060685	Connector
20060687	Temperature probe
20060689	Pipe
20060691	Pipe
20060692	Connector
20060694	Connection
20060695	Cable connector
20060696	Gaurd
20060697	Elbow
20060717	Baffle
20060718	90° bend
20060725	Cock
20060727	Master PCB
20060728	Master wiring harness
20060729	Burner
20060730	Burner seal
20060731	Use 20101605

20060732	Flange
20060938	Card Reader Kit
20061168	Combustion Chamber Clip and 2 rivets
20061473	Gas manifold
20061474	Delivery manifold
20061475	Lateral panel
20061476	Rear panel
20061477	Heating return manifold
20061478	Upper Front Panel
20061480	Top panel
20061481	Lateral panel
20061482	Left Panel
20061484	Right Panel
20061486	Upper Front Panel
20061488	Top panel
20061489	Gas manifold
20061490	Heating return manifold
20061492	Delivery manifold
20061493	Connector
20061494	Connector
20061498	O-ring
20061501	Bend
20061502	Rear panel
20061504	Diaphragm
20061506	Flange
20061507	Top panel
20061508	Top panel
20061510	Left Hand Door
20061512	Right Hand Door
20061513	Left Panel
20061514	Rear panel
20061516	Right panel
20061517	Top panel
20061518	Rear panel
20061751	Thermometer
20061944	Use 20029826
20063116	4 Pole Connector
20063463	Siphon
20063464	Siphon Cover
20063466	Condensing Pipe
20063467	Condensing Pipe
20063468	Washer
20063584	Air Pressure Switch
20063990	Left Hand Door
20063991	Left Panel
20066456	Plastic Condense Pipe Replaced 10027543
20066460	Plastic Condense Pipe Replaced 10027568
20066463	Plastic Condense Pipe Replaced 10028015
20066464	Plastic Condense Pipe Replaced 10027977
20067062	Wiring Harness CN6 to M6 to CN5.

20067270	Heat Exchanger
20067305	Heat Exchanger
20067310	Combustion cable
20067421	Front Panel
20067579	Mixer
20067580	Pipe
20067581	Flexible Pipe
20067584	Mixer
20067585	Gas Pipe
20067807	Instrument Panel
20067812	Instrument Panel
20067813	NTC Sensor
20067815	Use 20028733
20067816	Pipe
20067826	Pipe
20068881	Plastic Condense Pipe Replaced 10024132
20068882	Plastic Condense Pipe Replaced 10024440
20068884	Plastic Condense Pipe Replaced 10024521
20068965	By Pass Valve Lock
20068999	Washer - Obsolete
20069007	Air Chamber Access Panel
20069510	Frame assembly
20069541	Printed circuit board Replaced 20055454 & 20025735
20069542	3/4 Connection
20069549	Wiring Harness
20069587	LPG to NGConversion Kit
20069592	LPG to NG Conversion Kit
20069593	NG To LPG Conversion kit
20069786	DHW Actuator
20071334	Printed Circuit Board with display
20071802	Use 20101178
20071908	Gas Pipe
20071909	Flow Pipe Assembly
20071910	Flow Pipe
20071911	Frame Assembly
20071912	Air box front cover
20071914	Burner Assembly
20071916	Support kit for Condensing Exchanger
20071918	Case Assembly
20071921	Condensing Exchanger Assembly
20072077	Sensing electrode
20072084	Cover
20072228	Knobs Kit (2 Knobs)
20072330	Pipe
20073417	Heat Exchanger
20073427	Flange
20073436	Fumes Connection
20073521	Control Panel
20073523	Case Assembly
20073678	Control Panel

20073700	Use 10022349
20073721	Control Panel
20073763	Condensing Assembly - Same as 20028765
20074451	Condensation Outlet Manifold
20074453	Exhaust Tube
20074454	Condensation Outlet Tube
20074458	Condensation Outlet Manifold
20074462	Exhaust Tube
20074728	Spark/Ignition electrode Replaced 10027620
20075973	Use 20000713
20076437	CN5 to Relay Board
20076889	Flexible Pipe
20076890	Combustion Cable
20076891	Flow Pipe Assembly
20076892	Front Panel
20076893	Case Assembly
20076998	Mixer
20078170	Front Panel
20078171	Pipe
20078173	Case Assembly
20078350	Use 20081926
20078519	Instrument Panel
20079833	Frame Assembly
20079944	Printed Circuit Board - Replaced 20036547
20081059	Plug - Obsolete
20081316	Fan Assembly with Built in Mixer
20081318	Fan Assembly with Built in Mixer
20081537	Air Box
20081858	Slave Wiring Harness
20081859	Motor
20081860	Pipe
20081926	Thermistor/NTC Replaced 20003819 and 20004365
20081973	CN7 TO CN2 External Pump Relay
20082101	Use 10025647
20082414	Connection
20082915	LPG to NG Conversion Kit
20082917	NG to LPG conversion kit
20083194	Case
20083225	Heat Exchanger
20083256	Pipe - Obsolete
20083257	Pipe - Obsolete
20083995	LPG to NG Conversion Kit
20083996	NG to LPG Conversion Kit
20084372	Fan Baffle R/H
20084373	Fan Baffle - Replaced 10020516
20085616	LPG Conversion Kit - Obsolete
20085965	Fan
20086250	Burner
20086269	Heat Exchanger Insulation
20086438	LPG to NG Conversion Kit

20086673	Burner
20087082	Combustion Cable
20087173	NG to LPG Conversion Kit
20087176	NG to LPG Conversion Kit
20087319	Burner
20087321	Mixer
20087361	Frame Assembly
20087379	Burner
20088612	Unica I (ERP) Air box
20088617	Instrument Panel
20088621	Instrument Panel
20089382	High head pump
20089999	Plug and Nut
20090680	Pipe
20091280	Fumes Thermostat
20091281	NG Burner
20091282	Flue draught diverter
20091526	Pipe
20091527	Pipe
20092620	Fitting / Union Replaced 10026194
20093799	Clip for High Limit stat onto Heat Exchanger
20093908	Integral NRV
20094369	Gas Valve
20095477	Casing
20096202	Degasser Connection Assembly
20096531	Wiring Harness ERP
20096793	Degasser Connection Assembly
20097247	Instrument Panel
20099105	ERP Pump Assembly
20099541	Fairlead
20099544	Pipe
20099545	Flow Pipe
20099548	Degasser Kit and Pipe
20100735	Pump Cable ERP
20100812	PWM Pump Cable
20101177	Instrument Panel
20101178	Control Panel Cover (Rear) Replaced 20071802
20101179	Instrument Panel and Cover Combined
20101312	Use 5221
20101331	Flange Assembly - Replaced 20047573
20101332	Heat Exchanger Bracket - Replaced 20051029
20101605	O ring replaced 20060731
20101723	CN2 TO M3 Mains Connection, Pump & Gas valve with TYCO lead for clock
20101724	Pressure Gauge Holder
20101725	Pressure Guage
20102262	PTFE teflon gasket Replaced 105904
20102628	CN2 TO Gas Valve, Pump & Fuse block, also TYCO plug for OT controls
20102629	Flow Pipe
20102646	Flow Pipe
20102766	Power wiring harness

20104238	Heat Exchanger - Replaced 20036549
20104982	Instrument Panel
20104984	Pump Caple
20104985	Flow Pipe
20104986	Pipe
20104988	Flow Pipe
20104996	Pump
20104997	M3a to CN4 external pump relay, CN2 gas valve, pump, pressure dif switch
20108296	Water Guage Carrier
20109416	Pump
20109417	Discharge Temp Sensor - Replaced 4026285 and 20055396
20112974	Intrument Panel
20112975	Flow Pipe
20113021	CN9 to DHW flow switch, DHW NTC & Water pressure switch - Replaced 20025734
20113104	LPG to NG Conversion Kit (5.1 Jet) - Replaced 20057751
20113110	NG to LPG Conversion Kit (3.9 Jet) - Replaced 20029055
20115159	Nipple
20115165	Printed Circuit Board
20115425	Printed Circuit Board - Replaced 20079944 and 20036547
20116624	Gasket for top of 25kw burner (20044892)
20116625	Burner seal (On top of 20055216 burner)
20118530	Air Box Cover
20118573	Pipe
20118574	Pipe
20118575	Pipe
20118577	Frame Assembly
20118578	Power Wiring harness
20118580	Spark Electrode Cable
20118582	Spark Sense Electrode
20118588	Instrument Panel
20118590	Case Assembly
20118917	Clock Casing
20118918	Clock Cable
20118919	Valve Cover (Excluding Clock)
20118920	Instrument Panel
20118921	Control Panel Cover
20118922	Case
20119367	Display Frame on Caseing
20119369	Case Assembly
20119995	Ignition electrode - Replaces 20057856
20119996	Sensing/Detection electrode - Replaced 20072077 and 20057857
20120828	Locking Pin
20120837	Frame - Replaced 01005496
20123398	Conensing Exchanger Assembly - Replaced 20058630
20125030	Condensing Assembly - Replaced 20071921
20125237	Condensing exchanger assembly - Replaced 20057854
20125261	Expansion Vessel Bracket
20125380	Pipe
2033	Transformer (Repl 10023478)
2044	Use 10028141

2047	Heating bypass valve
2051	Pipe
2052	Pipe
2053	Pump Pipe
2059	Air Box Side (Left and right the same)
2060	Air Box Side (Left and right the same)
2061	Use 10020430
2062	Obsolete - Case
2068	Obsolete - Baffle
2069	Burner Baffle
2072	Air Chamber
2073	Air box bottom (Rep 10027894/1912)
2074	Boiler Bracket
2075	Use 10022029
2076	Fan Assembly
2080	Use 10020493
2089	Electronic Ignition Box
2090	Gas Pipe
2091	Use 2470
2092	Sensing Electrode
2093	Pipe
2095	Obsolete - Pipe
2096	Obsolete - Wiring Harness
2111	LPG jet 5.0
2127	Insert
2139	Gas Valve (replaced 2897)
2164	Use 10023603
2165	Use 10027757
2192	Use 10027864
2201	Use 10022533
2204	8 Litre Expansion Vessel
2211	Potentiometer Extention
2213	Obsolete - Connection
2214	Use 20046189
2216	Manifold Plug
2217	Screwed Connection
2218	Use 10022000
2219	Use 10022002
2222	Locking Pin
2223	Locking Pin
2225	Use 20002906
2226	Rubber Seal
2228	Combustion Cover
2229	Use 10024779
2230	Rear Insulation Panel for Combustion Chamber
2231	Side Insulation Panel for Combustion Chamber
2232	Front Insulation Panel for Combustion Chamber
2233	Blanking Plate
2234	Burner
2235	Burner Bar NG

2236	Obsolete - Burner Bar LPG
2237	Connection
2238	Cross Lighting Strip
2243	Obsolete -Gas Valve Outlet Pipe
2255	Spark / ignition electrode and lead
2258	High Limit Thermostat
2260	Use 10022499
2261	Manifold Plug
2266	3/4" Gas cock
2294	Clock Harness (Option)
2310	Main Heat Exchanger
2353	NG Jet
2378	Use 01005246
2381	Use 01005245
2455	Screw Driver
2468	Pressure Gauge
2470	Spark Electrode
2490	Flexible Pipe
2491	Pipe
2492	Flexible Pipe
2493	Pipe
2494	Gas Pipe
2495	Wiring Harness
2554	M5 to Pump cable
2564	Pressure Gauge
2573	Expansion Vessel Rep 106333 10 Litre
2577	Obsolete -Cold Water Inlet Pipe
2578	Pipe
2586	44mm Restrictor Ring
2588	Clip
2600	Thermostat
2677	Air Pressure Switch
2678	Obsolete -Hood assembly
2701	Ribbon Cable M9 to M2 between main PCB & display PCB
2703	Obsolete
2710	Fitting
2726	Water Pressure switch (10028141)
2776	Pipe
2785	Thermostat Shaft
2801	Burner NG
2802	Obsolete - Burner LPG
2803	Obsolete -CombustionChamberAssembly
2804	Frame
2805	Pipe
2806	Obsolete -Mynute 28SE Wiring
2810099	Obsolete -Eclipse Heat Exchanger
2819	Combustion Cover
2820	Air Baffle RH
2821	Obsolete -Air Baffle LH
2822	45° Flow/Return Valve

2823	flow / return valves connector
2851	Obsolete -Thermostat Bracket
2860	Hood assembly
2865	Fan Assembly
2868	Venturi
2873	Side Insulation Panel for Combustion Chamber
2888	Obsolete - Seal
2897	Use 2139
2903	DHW Inlet Manifold
2904	Use 10020335
2905	Motorised Valve
2906	Motorised Valve Fixing Wrench
2907	Safety valve Replaced 8433 (Push Fit)
2908	Non Return Valve
2909	Valve For DHW Bypass
2910	3 Port Valve Bobbin
2911	Automatic by-pass plug
2913	Bobbin Seating Washer
2915	Distribution Manifold (Complete)
2916	Obsolete -Distribution Manifold
2936	Hood Assembly
2939	Fan Flue Connection
2940	Bracket
2946	Fitting/union
2950	Use 10021792
2966	Cover
3020233	Premix Burner
3020235	Fan
3020400	Burner head silicone gasket
3087	Obsolete -Venting Plug
3106	Obsolete -Fan Plate
3107	Obsolete -Clamp Bracket
3112	Obsolete -Pressure Differential Switch RS Turbo
3113	Obsolete -PressureSocket&Venturi
3118	Obsolete - Electric Igniter Generator
3135	Obsolete - Seal
3139	Sight Glass
3175	Obsolete - Heating Manifold
3183	Obsolete -Auto By-Pass Connecting Tube
3190006	Neutro door sea 1 metre
3207	3 Port Valve
3208	Obsolete -Heating Manifold
3212	Heating Thermostat
3220043	Neutro pellet tank start
3260168	Neutro main pcb
3260169	Neutro flue temp probe
3260170	Neutro ambient temp probe
3260171	Neutro primary temp probe
3267	Heating Thermostat
3293070	Neutro on/off switch

3340181	Neutro worm screw motor
3387	Use 4188
3409	High Limit Stat
3412	Clip
3434	Obsolete -Fan Assembly
3464	Anti freeze stat
3478	3 Amp Fuse (individual)
3484	Obsolete -Burner Baffle Right Side RS Turbo
3497	Obsolete -Injector - Pilot
3499	Obsolete
35026	Obsolete -Combustion Chamber
3601205	Neutro fan
3601207	Neutro air pressure switch
3601500	Neutro ign plug support bracket
3601505	Neutro display PCB
3607	Obsolete -Piezo Igniter
3611	Obsolete -Diaphragm 6 screw
3721	Obsolete -Ignitor Lead
3740	Obsolete -O'Ring 4 Pumb Union
3771	Use 4961
3774	Obsolete -Main Burner Jet LPG 1.30
3800	Obsolete -Expansion vessel
394404	Unifix Clock Screw
4007	Sight Glass Retaining Ring
4008	Obsolete -Expansion vessel
4009	Obsolete -Main Heat Exchanger RS Turbo
4013	Obsolete -Gas Valve to Burner Connecting Pipe
4014	Obsolete -Main Heating Return Pipe
4016	Obsolete -Pilot Pipe
4026	3/4" BSP Locknut
4026225	Fan motor
4026226	Fan
4026229	Compressor
4026230	Anti-vibration feet
4026231	Accumulator
4026232	Liquid receiver
4026233	4 way valve
4026234	Liquid assy
4026235	Magnetizing coil valve
4026236	Outlet water pipe
4026237	Inlet water pipe
4026239	Reactor
4026240	Condensing pipe
4026241	Expansion vessel
4026244	Heat Exchanger
4026245	Pump
4026246	Water sensor
4026247	Flow switch
4026248	Use 10029306
4026249	Pressure valve

4026250	Discharge temp sensor
4026251	Exchanger detector
4026252	Suction detector
4026253	External temperature detector
4026254	Anti-vibration feet
4026255	Inverter Module Rep 4026258
4026256	Front Panel
4026257	Heat Exchanger
4026258	Use 4026255
4026259	Compressor
4026260	Liquid Assy
4026261	Magnetizing Coil Valve
4026262	Liquid Receiver
4026263	Reactor
4026264	Liquid Receiver
4026265	Inlet Water Pipe
4026266	Compressor
4026267	Anti-Vibration Feet
4026271	Heat Exchanger
4026272	Detector
4026273	Detector
4026274	4 Way Valve
4026277	Fan
4026280	Printed Circuit Board
4026281	Inverter Module
4026283	Outlet Water Pipe
4026285	Use 20109417
4026287	Pump
4026291	Guard
4026292	Condenser
4026295	Transformer
4028	Use 6493
4036	Obsolete -Rubber Ring for 4018
4037	Obsolete -Seal
4039	Obsolete -Seal
4045	Obsolete -Summer/Winter Switch
4049	Obsolete - Double Microswitch
4061	Obsolete -Nut
4062	Obsolete -Olive
4065	Obsolete -22mm Olive
4095	Obsolete -Hot Water Outlet Nut and Tail
4105	Obsolete -Electrode Lead
4114	Obsolete - Pump Union Nut
4144	Obsolete
4148	Triple Microswitch
4157	Obsolete -Triple Rocker Switch
4174	Obsolete - Hanhing Bracket
4174A	Obsolete -Hanging Bracket
4175	Obsolete -PCB DC Turbo
4188	Obsolete - PCB

4189	Obsolete -Flow Pipe with Air Separator
4250	Safety Valve (Screw Fit)
4254	Automatic Air Vent
4254G	Auto Air Vent
4257	Obsolete -Boiler Thermostat
4274	Obsolete -1/2 Inch BSP Locknut
4298	Diaphragm
4302	Microswitch
4321	Obsolete -See 01005137
4325	Obsolete -Cork Gasket
4332	Obsolete -Single Microswitch Cover
4333	Obsolete -Main Heat Exchanger RS Turbo
4336	Obsolete -Main Burner
4357	Obsolete
4359	Obsolete -Double Rocker Switch
4426	Obsolete
4434	Obsolete - Resistor
4441	Temperature Gauge (rep 7171)
4449	Obsolete -Expansion Vessel Clamp Bracket
4472	Obsolete -Pressure Gauge
4489	Obsolete -Expansion Pipe
4490	Obsolete -Main Heating Return With Union
4492	Expansion Vessel
4493	Obsolete -Heating Distribution Manifold
4494	Obsolete -Domestic Distribution Manifold
4495	Obsolete -3 Way Valve
4496	Obsolete -Pipe
4497	Obsolete -Cylinder Return Pipe with Union
4505	Obsolete
4518	Obsolete -Mini Expansion Vessel
4534	Obsolete -Flue Outlet Adaptor
4535	Obsolete -Gas Connecting Barrel
4537	Obsolete -Piezo Igniter
4538	Obsolete -Lint Guard
4539	Obsolete -Flow and Return Valve
4540	Obsolete -Cock
4541	Obsolete -Cock
4542	Obsolete -Boiler Thermostat
4543	Obsolete -Thermostat Control Knob 21/84 MCF
4544	Connection for Dom Exp Vessel
4545	Obsolete -Domestic Heat Exchanger
4546	Obsolete -PCB DC Turbo
4549	Domestic Heat Exchanger
4551	Obsolete -Cylinder Flow Pipe with Union
4559	Obsolete -NTC Probe
4562	Obsolete -Double Microswitch Cover
4563	Obsolete -Double Microswitch
4565	Obsolete -Boiler Thermostat
4573	Obsolete -Grey Main Frame
4577	Obsolete -Support Bracket for Front Panel

4580	Obsolete -Pilot Bridge
4581	Obsolete -Expansion Vessel Fixing Bracket
4583	Obsolete -Double Action Hinge
4585	Obsolete -Stainless Steel Sheild
4587	Obsolete
4605	Obsolete -Flow Pipe with Air Separator
4611	Blanking Plug for Heating Manifold
4612	Obsolete -Blanking Plug
4617	Obsolete -Sleeve
4619	Obsolete -Front Seal
4625	Obsolete -Gas Valve
4627	Obsolete -Gas Connecting Barrel
4628	Obsolete
4630	Obsolete -Burner
4632	Obsolete -Spark Electrode
4634	Obsolete -Pilot Pipe
4636	Obsolete -Lead for HT Piezo
4638	Obsolete -Burner Injector Manifold
4640	Gas Valve
4641	Obsolete -Terminal Cover
4642	Obsolete -Washer for Piezo Ignitor
4650	Obsolete
4659	Obsolete -LPG Burner
4663	Obsolete -Magnetic Mod Spring & Coil
4665	Obsolete -Main Gas Injector
4668	Obsolete -Spring for Gas Regulator LPG
4680	Obsolete
4681	Obsolete
4691	Obsolete -Domestic Cylinder Supply
4692	Obsolete -Domestic Cylinder Hot Water Outlet
4699	Obsolete -Brass Socket Heating Flow & Return
4716	Obsolete -Gas Valve to Burner Outlet
4723	Obsolete -Tail Plate Seal
4751	Obsolete
4761	Obsolete
4768	Obsolete
4801	Obsolete
4802	Obsolete
4803	Obsolete
4806	Obsolete
4807	Lock Nut
4828	Obsolete
48309	Clip
48310	Stud
48355	Screw
48381	Clip
48382	Screw - Replaced 100940
48474	Use 5023
4851	Rubber Wall Liner
4866	Obsolete

4870	Obsolete
4874	Obsolete
4875	Obsolete
4881	Obsolete
4888	H/I Stat (replaces 6399)
48896	Clip x 4
48897	Cover (Not a spare)
48898	Main Printed Circuit Board
48899	Use 10024558
48900	Clip
48901	Hook
48902	Obsolete
48903	Seal
48904	Locking Nut
48905	Obsolete
48908	Use 5071
4891	Pilot Jet NG.27
48911	Use 6898
48914	Use 5070
48917	Use 8968
48918	Use 1947
48919	Clip
4892	Obsolete
48920	USE 1858
48921	Use 1864
48922	Cover
48923	Cover
48926	Use 10020217
48927	Use 1920
48928	Use 1549
48929	Use 5317
4893	Pilot Jet LPG 22
4897	Obsolete
4909	Obsolete
4910	Obsolete
4911	Obsolete
4916	Obsolete
4918	Obsolete
4923	Use 3434
4925	Obsolete
4930	Obsolete
4931	Pump Over-Run Thermostat
4932	Obsolete - Pilot Pipe
4934	Obsolete - Control Panel Hinge LH
4935	Obsolete - Control Panel Hinge RH
4936	Obsolete - Thermostat Knob
4937	Obsolete
4943	Obsolete
4944	Obsolete - Mounting Plate Back
4949	Obsolete

4961	Thermocouple
4962	Obsolete - Domestic Manifold
4965	Obsolete - Domestic Heat Exchanger Return Pipe
4975	Obsolete - Earth Terminal Tag
4976	Obsolete - Spacer for Thermostat
4977	Obsolete - Strip
4980	Obsolete - On/Off Switch
4981	Obsolete - Auto Summer/Winter Switch
4983	Obsolete - Heating switch
4994	Obsolete - Main Burner LPG
4998	Obsolete - Main Burner LPG
5023	3/4" Fibre Washer
5024	Obsolete - Fibre Washer
5025	Washer
5026	1/2" Fibre Washer
5027	Obsolete
5029	Obsolete
5036	Pump Washer
5038	Washer
5039	Washer
5040	Obsolete - Aluminium Washer
5041	Washer
5042	Washer
5048	Obsolete - Washer
5049	Gasket
5050	Obsolete - Screw
5052	Clip
5055	Obsolete
5067	Obsolete
5068	Seal
5070	Fibre Washer
5071	Fibre Washer
5072	Fibre Washer
5077	Screw
5078	Obsolete
5079	Screw
5080	Screw
5081	Screw
5082	Obsolete
5083	Screw
5084	Obsolete
5085	Obsolete
5086	Obsolete
5092	Obsolete
5093	Obsolete
5094	Obsolete
5095	Obsolete
5097	Obsolete
5105	Machine Screw M4 x 10mm
5111	Obsolete

5122	Obsolete
5124	Screw
5128	Edge Clip
5129	Obsolete - Screw
5131	Obsolete
5132	Obsolete - Hexagon Nut
5133	Obsolete - Washer
5134	Obsolete - Earth Connector
5136	Obsolete - Spacer
5140	Obsolete
5141	Obsolete
5142	Obsolete - Edge Clip
5143	Obsolete - Edge Clip
5150	Obsolete
5151	Edge Clip
5155	Obsolete - Cable Clip
5163	Obsolete
5166	Obsolete - Screw
5168	Rivet
5169	Obsolete - Self tapping screw
5170	Screw
5171	Obsolete - Screw
5172	Burner Plate
5174	Obsolete - Circlip
5175	Obsolete - Screw
5176	Screw
5178	Obsolete
5179	Obsolete - Circlip
5180	Obsolete - Screw
5182	Obsolete - Screw
5183	Machine Screw Hex Head M6 x 13
5184	Machine Screw Hex Head M4 x 12
5186	Obsolete - Screw
5187	Obsolete
5188	Obsolete - Screw
5192	Fibre Washer
5195	Fibre Washer
5197	Obsolete - Screw
5203	Plastic Washer
5207	Obsolete - Screw
5208	Washer
5209	Obsolete
5212	Obsolete
5213	Small Screw DHW Heat Exchanger
5214	Large Screw DHW Heat Exchanger
5216	Obsolete - Headless Screw
5219	Obsolete - Screw
5221	M5 Screw Phillips Hd
5224	Clip
5228	Obsolete

5230	Clip
5231	Obsolete
5235	Screw
5236	Washer
5237	Washer 28mm
5240	Obsolete - Screw
5251	Obsolete - Frame
5254	Obsolete - Door Panel
5255	Obsolete - Case Reinforcement R/H
5256	Obsolete - Case Reinforcement L/H
5258	Obsolete - Door Panel
5259	Obsolete - Control Panel Support Bracket (Left)
5261	Obsolete - Guard
5262	Temperature Gauge
5263	Pressure Gauge
5264	Obsolete - Thermostat Knob
5266	Obsolete - Back Panel Metal
5269	Front Insulation Panel for Combustion Chamber
5270	Rear Insulation Panel for Combustion Chamber
5271	Side Insulation Panel for Combustion Chamber
5275	Obsolete - Door Spring
5277	Obsolete - Air Separator and Return Pipe
5279	Gas valve support
5280	Pilot Assembly
5284	Obsolete - On/Off Switch
5295	Use 10020104
5296	Obsolete - Main Burner Town Gas
5297	Main Burner LPG
5298	Obsolete - Grommet
5299	Obsolete - Metal Side Panel R/H
5300	Metal Side Panel (L/H)
5301	Spindle
5303	Obsolete - Plastic Bush
5304	Plastic Bush
5305	Obsolete - Plastic Plate
5309	Spark electrode
5312	Back Side of Comb Chamber
5313	Obsolete - Combustion Chamber Front Cover
5315	Front Insulation Panel for Combustion Chamber
5316	Rear Insulation Panel for Combustion Chamber
5317	NG Burner (replaces 48929 and 10027564)
5318	Obsolete
5319	Main Burner LPG
5320	Obsolete - Air Separator and Return Pipe
5322	Screw M5X45
5323	Washer
5329	Obsolete - Cover for PCB
5332	Obsolete - Thermocouple
5333	Obsolete - Self Adhesive Tape
5335	Obsolete - Pipe

5351	Heat Exchanger
5356	Heat Exchanger
5366	Obsolete - Gas Valve Knob
5371	Obsolete - Cable Clamp
5388	Heat Exchanger with 2 x 5023 Washers
5394	Obsolete - Domestic Thermostat
5396	Obsolete - Wired Limit Thermostat
5436	Obsolete - Air Vent Bottle
5437	Obsolete - Plate
5438	Gas Valve
5441	High-limit Thermostat
5455	Obsolete - Socket Joint
5456	Obsolete - Connection
5470	Obsolete - Double Clamping Bracket
5472	Thermostat Clip
5475	Obsolete
550803	Aqua Flow Temp/Pressure relief valve
5588	Obsolete - Locating Stud
5589	Obsolete - Casing Lug
5591	Obsolete - Mode Selector Switch
5592	Mode Selector Switch
5602	Obsolete
5603	Obsolete
5604	Obsolete
5606	Obsolete
5617	Obsolete
5631	Obsolete
5634	Obsolete - Gas Valve
5635	Obsolete - Washer
5637	Use 0940
5638	Obsolete - 24/96 RSE Wiring Harness
5640	Spark Electrode & Lead
5641	Sensing Electrode & Lead
5643	Circuit Board
5731	Obsolete - Gas Pipe
5733	Obsolete - Pressure Switch
5735	Obsolete - Air Deflector
5739	Use 2076
5741	Obsolete - Fan Gasket
5742	Plate for gap between fan and Fan flue connector
5744	Obsolete - Air Tube Connecting Tee
5753	Use 10027352
5757	Obsolete - Control Knob
5758	Obsolete - Control Knob Extension
5776	Obsolete - Gas Connection
5784	Obsolete - Fixing Plate
5797	Circuit Board
5798	Obsolete - 20-80 Flowmatic Wiring Harness
5800	Piezo Ignitor
5808	Obsolete - Frame

5809	Obsolete - Case
5811	Obsolete - Control Panel Support
5812	Main Burner NG
5813	Obsolete - Main Burner LPG
5814	Obsolete
5852	Obsolete - Ignition Control Box
5853	Electrode & Lead
5863	Gas Valve Gasket
5868	Obsolete - Modulator Coil
5869	Obsolete - LPG Spring
5870	Obsolete
5876	Obsolete
5899	Obsolete - Expansion Vessel Pipe
5900	Obsolete - Seal
5901	Obsolete - Ignition Cable
5903	Use 7705
5904	Obsolete - Front Panel
5905	Combustion Chamber seal (1 metre)
5906	Hood Assembly
5907	Hood Assembly
5908	Combustion Chamber Front (Metal)
5909	Combustion Chamber Front (Metal)
5910	Fan Assembly
5911	Fan Assembly
5912	Fan Gasket
5913	Flue Connection
5914	Obsolete - Flue Connection
5915	Obsolete - Tube
5916	Use 7315
5917	Use 7317
5921	Venturi
5922	Obsolete - Flange
5923	Obsolete - Air Deflector
5924	Obsolete - Air Baffle
5926	Pressure Switch
5927	Seal
5929	Pipe
5930	Pipe
5931	Obsolete - Pipe
5932	Obsolete - Pipe
5938	Obsolete - Pilot Pipe
5940	Obsolete
5944	Silicone Tube
5945	Obsolete
5948	Obsolete - Cover
5949	Air Baffle
5950	Obsolete - Air Baffle
5951	Obsolete - Air Baffle
5956	Obsolete - Side Panel
5957	Combustion Chamber Cover

5958	Hood Assembly
5960	Use 2819
5961	Combustion Chamber Front Panel
5962	Combustion Chamber Back Panel
5963	Fan Assembly
5964	Obsolete - Fan Seal
5965	Obsolete - Flue Connection
5966	Obsolete - Fan Union Tube
5967	Obsolete - Flow Pipe
5968	Obsolete - Pump Pipe
5969	Obsolete
5970	Obsolete - Pipe
5971	Silicon Tube
5972	Obsolete - Air Deflector
5973	Obsolete - Pipe Fixing Bracket
5974	Obsolete - Gas Pipe
6021	Motor Vehicles
6025	15/50 excel complete pump assy
6026	Combustion Chamber Assembly
6027	Combustion Chamber
6028	Combustion Chamber
6151	Obsolete - Lead for Piezo
6160	Obsolete - Back Door Panel
6172	Obsolete
6173	Obsolete - Pipe for 3 Port Valve
6208	Obsolete - Half Inch Locknut
6228	Fan to Flue Connector (without Venturi's)
6266	Obsolete
6351	Obsolete
6352	Obsolete - Wiring Harness (Near full loom)
6354	Obsolete
6357	Obsolete - Gas Valve Manifold
6371	Obsolete - Flow Pipe
6373	Obsolete - Lint Guard
6374	Obsolete - Pilot Pipe
6375	Obsolete - Baffle Plate
6376	Obsolete - PCB
6377	Obsolete
6382	Obsolete - Flue Draft Divertor
6384	Obsolete - Flow Pipe
6385	Obsolete
6387	Obsolete - Main Burner NG
6388	Obsolete
6394	Obsolete - Front Panel
6395	Obsolete - Pilot Pipe
6396	Obsolete - Gas Valve Knob
6397	Obsolete - Main Burner
6398	Obsolete - Main PCB
6399	Use 4888
6400	Obsolete

6466	Reset Button
6471	Obsolete
6493	Resistor Replaced 4028
6494	Obsolete - Resistor
6495	Obsolete - Air Chamber
6516	Obsolete - Gas Valve
6614	High Limit Stat
6615	Obsolete - Thermostat Clip
6624	Obsolete - Buh for Pressure Sensor
6638	Obsolete - Delay Timer
666	Clip 24M
6676	Obsolete - Clock Blanking Plate
6678	Obsolete - Gas Valve
6679	Obsolete - Compensator NG
6681	Obsolete - PCB (Elidra)
6685	Obsolete - Aluminium Tube
6692	Obsolete - Aluminium Air Tube
6693	Obsolete - Thermostat Potentiometer Board
6694	Obsolete - Pressure Switch
6695	Obsolete - Aluminium Air Tube
6696	Obsolete - AirTube Connecting Branch
6704	Obsolete - Pressure Sensor
6705	Obsolete - L.E.D Board
6706	Obsolete - L.E.D Cover
6759	Obsolete - Delay Timer
6781	Obsolete - Gas Valve to Burner Pipe
6785	Obsolete - Gas Valve Bracket
6802	Obsolete - Pipe
6814	Obsolete - Plastic Plate
6815	Obsolete
6817	Obsolete
6818	Obsolete
6851	Obsolete - Flow & Return Manifold
6853	Flow Manifold Cover
6854	Obsolete - Fulcrum Arm
6855	Nut (Rear of Flow Manifold)
6856	Obsolete - Tube Screw
6857	Safety Valve Sleeve
6858	Obsolete - By-Pass Seating
6859	Nut
6860	Front Seal
6862	Spring
6863	Use 8436
6864	Use 8437
6865	Spring
6866	Use 2910
6867	Bearer Plate
6868	Obsolete - Gasket
6870	Washer
6871	Use 8441

6872	Diaphragm
6873	Use 8435
6874	Screw
6876	Obsolete - Front Plate
6877	Obsolete - Locking Sleeve
6878	Obsolete - Blanking Plug
6879	Spring
6882	Diaphragm
6883	Bearer Plate
6884	Use 8438
6886	Venturi
6887	Push Rod
6888	Push Rod
6890	Push Rod
6891	Nut
6893	Use 1489
6894	O'Ring
6895	O'Ring
6896	Nut
6897	Pump Washer
6898	O Ring
6901	Use 01005043
6902	Obsolete
6903	Screw
6911	Obsolete - O-Ring
6912	Inlet Pipe
6913	Outlet Pipe
6914	Obsolete - Nipple
6919	Front Seal
6920	Obsolete - Spring for Gas Regulator
6921	Obsolete
6985	Venturi (Positive)
7022	Use 10027352
7068	Obsolete - Aluminium Tube
7070	Use 01005272
7071	Obsolete - Pressure Switch Cover
7076	Obsolete - Bar
7081	Obsolete - Gas Valve Elidra
7082	Obsolete - LED Board
7085	Obsolete - PCB (Elidra)
7094	Obsolete - Gas Connecting Barrel
7095	Obsolete - Main Burner
7096	Main Burner
7097	Ignition Control PCB
7098	Gas Cock
7099	Water Supply Stop Cock
7100	3/4" Flow/Return Valve 90 Deg
7126	Obsolete
7130	By-Pass Retaining Nut
7131	Domestic By-Pass

7132	Domestic Manifold Top
7133	Obsolete - Three Port Valve Front Cover
7134	Seating Plate
7135	O'Ring
7139	Non Return Valve
7140	Domestic Heat Exchanger
7141	Domestic Heat Exchanger
7153	Obsolete - Main Burner LPG
7157	Obsolete - Instrument Panel
7159	Pressure Gauge
7160	Obsolete - Control Knob
7171	Use 4441
7172	Obsolete - Valve Cover Retaining Lug
7174	Obsolete
7175	Obsolete - Extension Bar
7192	Obsolete
7201	Obsolete - Frame
7204	Expansion vessel 8L
7206	Obsolete - Main Burner LPG
7207	Expansion Pipe
7209	Obsolete - Control Panel Support Bracket R/H
7210	Obsolete
7211	Obsolete - Front Panel
7212	Obsolete - Side Panel
7216	Obsolete - Connections Cover
7221	Pump Cable
7230	Obsolete - Gas Pipe
7232	Bridge
7233	Pipe
7236	NTC Sensor Rep 105922
7237	Obsolete - Instrument Panel
7238	Obsolete - Blanking Plug
7239	Pressure/Temp Gauge
7240	Obsolete - Control Knob
7243	L.E.D Plug and Lead
7260	Gas Valve
7261	Obsolete
7266	Obsolete - Flow Pipe
7280	Fan to Flue Connector (Without Venturi's)
7281	Silicon Tube
7301	Obsolete
7303	Gas Control Knob
7304	Obsolete - Pilot Pipe
7311	Obsolete - High Limit Thermostat
7314	Obsolete - Pipe
7315	Clamp
7316	Clamp
7317	Washer
7318	Washer
7330	Gas cock

738	Clock Wires (Twin Channel)
7602	Obsolete - 80E/96E Wiring Harness
7615	Heat Ex. Return Pipe
7616	Obsolete - Excell Fittings Kit
7618	Use 5910
7619	Obsolete - Main Frame
7620	Expansion Vessel
7621	Heating Manifold
7622	Obsolete - Combustion Cover
7623	NG Burner
7624	Obsolete - LPG Burner
7625	Gas valve
7701	Obsolete - Side Panel
7705	Obsolete - Side Panel
7714	Obsolete - Gas Valve to Burner Pipe
7715	Obsolete
7723	Obsolete - Baffle
7724	Obsolete - Baffle
7725	Obsolete - Spark Electrode & Lead
7776	Obsolete - Gas Connecting Barrel
7777	Obsolete - Gas Valve to Burner Connector
7778	Obsolete - Sense Electrode
7779	Obsolete - Fan Outlet Connector
7780	Pump Cable
7781	Pipe
7782	Obsolete - Pump Return Tube
7783	Obsolete - Pipe
7784	Obsolete
7785	Obsolete - Control Panel Bracket
7786	Obsolete - Mounting Plate
7787	Obsolete - Bracket
7788	Obsolete - Bracket
7789	Obsolete - Thermostat Knob
7790	Obsolete - Clock Blanking Plate
7791	Ignition Box (Ineco)
7792	Obsolete - Logo Strip
7793	Obsolete - Case
7796	Obsolete - 14/48SE 20/70SE Wiring Harness
7804	Obsolete - Expansion Vessel
7805	Use 10020076
7806	Combustion Chamber
7808	Ng burner
7809	NP 9 Main Burner LPG
7810	Heat Exchanger with 2 x 5023 Washers
7811	Use 2936
7812	Combustion Chamber Back Cover
7813	Combustion Chamber - Front
7814	Obsolete - R/H Fan Baffle
7815	L/H Fan Baffle
7816	Obsolete - Fan Outlet Connector

7817	Front Insulation Panel for Combustion Chamber
7818	Rear Insulation Panel for Combustion Chamber
7819	Obsolete - Pipe
7820	Obsolete - Pipe
7821	Obsolete - Logo Strip
7822	Combustion Chamber Front Panel
7824	Air box side
7831	Obsolete - Air Box Side
7832	Obsolete - Air Box Side
7835	Use 9763
7836	Obsolete - Pipe
7840	Obsolete - Gas Valve Bracket
7841	Obsolete - Mynute 28-96SE Wiring Harness
7842	Obsolete - Pump Wire
7843	Pipe
7844	Obsolete - Pipe
7845	Obsolete - Pipe
7846	Obsolete - Number Strip
7849	Air Chamber
7850	Obsolete - Pipe
7905	Obsolete - Gasket
7912	Obsolete - Gas Control Knob Extension
7915	Obsolete - Control Spindle Knob
7920	Obsolete - Casing
7948	Venturi Rep 6984 (Negative)
7999	O'Ring
8008	Flow governor (White)
8009	Flow govenor (Blue)
8030	Obsolete - Brass Sleeve
8031	Modulator coil
8036	Domestic Heat Exchanger (with 4 x 7999 O'rings)
8037	Domestic Heat Exchanger
8076	Obsolete
8079	Obsolete - Pipe
8083	Fan Flue Tube
8084	Air Box Hole Cap
8085	Use 10026933
8086	Brass Cap
8088	Obsolete - Combustion Chamber
8094	Obsolete - Gas Valve Outlet
8098	Obsolete - Silicon Tube
8158	Room sealed chamber
8159	Obsolete - Gas Valve Bracket
8160	Obsolete - Gas Valve Connection
8161	Obsolete - Pilot Pipe
8162	Obsolete - Gas Control Knob Extension
8163	Obsolete - Pipe
8165	Obsolete - Logo Strip
8166	Main Printed Circuit Board
8167	Obsolete - Mynute 14-48SP Wiring Harness

8173	Circuit Board
8174	Obsolete - Excell 80sp Harness
8193	Obsolete - 80E/96E Wiring/new
8194	Obsolete - 80SP wiring, new
8195	Use 01005272
8196	Obsolete - Pressure Switch Plate
8199	Obsolete - Bracket
8200	Obsolete - 80E/96E Wiring
8214	Ignition Box (Brahma)
8221	Obsolete - Thermocouple
8277	Gas Valve
8282	Spark Electrode Inc Lead
8283	Obsolete - Spark Electrode
8301	Sensing Electrode with Lead
8306	Obsolete - Drip Cover
8308	Spark Electrode
8319	Obsolete - Pipe
8322	Obsolete - Guard
8344	Obsolete - Frame Assembly
8345	Gas Valve
8346	Obsolete - Instrument panel
8347	Obsolete
8348	Obsolete
8349	Obsolete - Adhesive film
8350	Obsolete
8353	Printed Circuit Board
8354	Obsolete - PCB Cover
8355	Pressure Gauge
8360	Ignition Box (9962)
8361	Obsolete - Screw
8364	Spark Electrode Inc Lead
8367	Use 2258
8377	Pressure Gauge
8378	Quick primer pressue gauge
8381	Obsolete - 3 Way Valve
8402	Obsolete - Silicone tube
8404	Obsolete - Control Panel
8428	Heating Manifold
8429	Domestic Manifold
8430	Htg. Manifold Top
8431	Dom. Manifold Top
8432	Exchanger Connection
8433	Use 2907
8434	Venturi
8435	By-Pass Bobbin
8436	By-Pass Spring
8437	Spring
8438	Spring
8439	Plug
8440	Seating Plate

8441	Seating
8442	Fulcrum Arm
8444	O'Ring
8445	Gasket
8446	Use 1489
8447	Use 01005177
8448	Screw
8460	Pipe
8465	Obsolete - Guard
8468	Use 01005177
8477	Obsolete - Tube
8478	Spark Electrode with Lead
8481	Printed Circuit Board
8484	Use 10027352
8528	Obsolete - Support Bracket
8529	Obsolete - Control Panel Bracket
8530	Obsolete - Control Panel Bracket
8533	Heating Distribution Manifold
8536	Domestic Water Manifold
8537	Connection
8538	Pressure Sensor Pipe
8539	Deressure Sensor Pipe
8540	Obsolete - Fixing Bracket
8541	Clip
8542	O-Ring
8544	Obsolete - Gas Connection Pipe
8545	Obsolete - Pilot Pipe
8546	Obsolete - Gas Knob
8547	Combined High limit Flue Stat
8548	Expansion Vessel Pipe (Maxin)
8549	Flow Pipe
8550	Obsolete - Return Pipe
8558	Microswitch Clip
8559	Obsolete - Maxin Case
8584	Pipe
8585	Pipe
8589	Obsolete - Gas Pipe
8602	Use 1606
8607	Obsolete - Control Panel (rep by 1639)
8631	Obsolete
8633	Obsolete - Fulcrum Arm Nut
8634	Obsolete - Brass Rod for Fulcrum Arm
8635	Obsolete - Fulcrum Arm Locating
8654	Clock Blanking Plate
8673	Obsolete - Plastic Cover
8675	Flue Clamp and Gasket
8799	Obsolete - Wiring Harness 14-48
8809	Gauge
8852	Use 1191
8855	NTC Sensor

8860	Use 1194
8861	Obsolete - PCB Back Semi Box
8862	Obsolete - PCB Front Semi Box
8863	Obsolete
8864	Obsolete
8866	Brass Cap
8868	Pipe
8869	Obsolete
8871	Obsolete - Pipe
8872	Use 9731
8873	Fitting/union
8874	Use 9730
8876	Pump
8877	Obsolete - Pump Harness
8878	Use 1044
8880	Obsolete - Combusrion Chamber
8881	Obsolete - Combusrion Chamber Top
8882	Use 1035
8883	Obsolete - Silicone Seal
8884	Use 2810099
8885	Use 1033
8886	Obsolete - Burner Housing
8887	Use 1016
8888	Use 1193
8889	Use 1196
8890	Spreader Plate
8891	Use 10022853
8892	Use 1019
8893	Fan Gasket
8896	Gasket
8897	Obsolete - Main Burner Injector
8899	Use 9299
8900	Pilot Glass
8901	Obsolete - Glass Cover
8902	Washer
8903	Washer
8904	Sleeve
8906	Obsolete - Gas Pipe
8907	Obsolete - Gas Pipe
8908	Obsolete - Analyser test point
8909	Plug
8910	Non Return Valve
8911	Extension for AAV's (4254 + 9806)
8912	Washer
8913	Obsolete - Reducing Nipple
8914	Gasket
8915	Obsolete - Test Nipple
8916	Pressure Nipple
8918	Input P.C.B.
8921	Obsolete - Green-Red LED

8922	Obsolete
8951	Obsolete
8952	Obsolete - Connection
8953	Obsolete - Heating manifold
8954	Obsolete - Cover
8955	Pipe
8956	Pipe
8957	Obsolete - Pipe
8958	Connection Manifold
8959	O'Ring
8960	Obsolete - Input PCB
8967	Obsolete - Silicon Tube
8968	Fuse (Individual) 2 AMP
8969	3.15 Amp fuse
8970	Main Burner Jet NG 3.8
8974	Obsolete - Gas Union Nipple
8975	Washer
9129	Obsolete - Main Burner Jet NG
9154	Obsolete - Silicon Tube
9156	Obsolete - Seal
9164	Use 7281
9232	Use 01005272
9233	Obsolete - Bracket
9263	Pump Lock Key
9264	Combustion chamber
9265	Obsolete - Back Frame
9266	Expansion Vessel - (8548 Pipe Needed If Old Vessel is Rectangle)
9268	Obsolete - Return Distribution Manifold
9269	Obsolete - Distribution Manifold
9270	Obsolete - Distribution Manifold
9271	Safety Valve Pipe
9272	Obsolete - Gas Valve Bracket
9273	Obsolete - Instrument Panel
9274	Obsolete - PCB Cover
9275	Obsolete - Guard
9285	Burner Washer
9286	Obsolete - Spacer
9287	Washer
9288	Spark Electrode
9289	Obsolete - O'Ring
9291	Obsolete - Main Burner Jet Support
9292	Screw
9295	Main burner jet LPG
9296	Spring
9299	Washer
9430	Flow governor (Red)
9461	Selector Switch
9576	Obsolete - Gas Valve Bracket
9581	Use 0443/10SE 0444/14SE 0445
9582	Pressure Gauge

9583	Obsolete - Control Box top Panel
9586	Mynute 10, 14 & 20SE Harness
9587	Obsolete - Casing
9594	Pipe
9599	Knob
9695	Thermostat
9696	Obsolete - Limit Thermostat
9701	Front Panel
9709	Clock blanking plate
9716	Eclipse ESS Printed Circuit Board
9718	Flow governor (Black)
9730	Condense Connecting Nipple
9731	Condense Pipe replaced 8872
9732	Washer
9752	Cover
9753	Obsolete - Plastic Trade Mark label
9754	Obsolete - Air Chamber
9756	Expansion Vessel Pipe
9757	Obsolete - Pipe
9758	Pipe
9759	Knob
9761	Obsolete - Wiring Harness Maxin
9762	Obsolete - Valve Kit
9763	3/4" Flow/Return Valve Straight
9764	Water Stop Cock
9766	Connection
9771	Obsolete - Pump Cable
9772	Obsolete - Pipe
9773	Water Supply Stop Cock
9774	Mixing Valve
9786	Obsolete - Gas Connection Barrel
9794	Eclipse ESC Printed Circuit Board
9797	Gas Cock
9799	Obsolete - Frame
9800	Ignition Box
9805	Air Switch Bracket
9806	Auto Air Vent
9807	Fitting/union
9814	Obsolete - Guard
9842	Gas Valve
9849	Use 9806
9959	Use 1196
9960	Spark Electrode Cable
AE014	Obsolete
B81508	Case
B81510	Pressure Switch
B81511	Premix Burner
B81512	Detector
B81513	Pipe
B81514	Pipe

B81515	Use 105910
B81516	Replace Pipe 105910
B81517	Wiring Harness
B81518	Slave Wiring Harness
B81519	Master Wiring Harness
B81520	Serial Wiring
R103317	USE 10023566 (L) & 10023568 (S)
R103319	USE 10023569 (S) & 10023567 (L) OR 1786
S10002	Obsolete - Small Spring Gas Valve
S10003	Obsolete - Front Case R2A (S178
S10005	Obsolete - Large Spring GasValve
S10006	Obsolete - O Ring
S10007	Obsolete - Push Rod
S10008	Obsolete - Lower W-Section Nut
S10009	Obsolete - Washer
S10010	Obsolete - Burner Cover Plate
S10011	Obsolete - Test Nipple Union
S10012	Obsolete - Diaphragm
S10013	Use 10024364
S10014	Obsolete - Adjustment Spindle S
S10015	Obsolete - Washer
S10017	Obsolete - Spring
S10018	Obsolete - O Ring (Water Section)
S10019	Obsolete - Gland Nut
S10020	Obsolete - Upper water section
S10021	Obsolete - Electrode Lock Nut
S10023	Obsolete - Slow Ignition Device
S10024	Obsolete - Modulation Bobbin NG
S10025	Obsolete - Cold Water Inlet Pipe
S10026	Obsolete - Gas Valve Insert LPG
S10027	Obsolete - Hot Water Outlet Pipe
S10028	Obsolete - Modulation Bobbin LPG
S10029	Obsolete - Gas Valve Union Rear
S10030	Obsolete - Flow Tube
S10031	Obsolete - Venturi
S10032	Obsolete - Return Tube
S10033	Obsolete - Test Nipple Supply Pipe
S10034	Obsolete - Filter
S10035	Obsolete - Pilot tube
S10036	Obsolete - Gas Valve Union
S10037	Obsolete - Microswitch Bracket
S10038	Obsolete - Burner Injector NG
S10040	Obsolete - BurnerInjector LPG
S10041	Obsolete - Temp Regulating Spin
S10042	Obsolete - Sleeve Nut
S10048	Obsolete - Mech Gas Assembly
S10049	Obsolete - M Switch Adj Lever
S10050	Obsolete - Microswitch
S10055	Obsolete - Electronic Ignition
S10057	Obsolete - Rear Outer Case

S10061	Obsolete - Extension Screw
S10063	Use 5911
S10064	Use 10023699
S10069	Obsolete - Hood Assembly
S10070	Obsolete - Comb Chamber Cover
S10071	Obsolete - Silicon Tube
S10082	Obsolete - Washer
S10083	Obsolete - Screw
S10084	Obsolete
S10086	Obsolete - Sight Glass Outer
S10087	Obsolete - Sight Glass Outer
S10088	Obsolete - Sight Glass Inner
S10089	Obsolete - Sight Glass Retainer
S10090	Obsolete - Wiring Harness
S10091	Obsolete - Washer
S10092	Obsolete - Connecting Leads
S10093	Obsolete - Washer for Modulation
S10095	Obsolete - Test Nipple Union
S10096	Use S10098
S10097	Obsolete - Mech Gas Ass Upper
S10098	Obsolete - Outer Case Seal Top & Bottom
S10099	Obsolete - Gas Valve Gasket
S10106	Obsolete - Pilot Tube Olive
S10108	Obsolete - Microswitch
S10111	Obsolete - Heat Exchanger Pipe Clamp
S10113	Obsolete - On/Off Switch
S10114	Obsolete - Screw
S10115	Obsolete - Heat Exchanger
S10116	Obsolete - Main Burner
S10118	Obsolete - Water section
S10119	Obsolete - Reset Button Switch
S10123	Obsolete - Control knob
S10124	Obsolete - Temperature Control
S10129	Obsolete - Spark electrode
S10131	Obsolete - Fibre Washer
S10132	Obsolete - Pilot Assembly
S10133	Obsolete - Gas Valve
S10134	Obsolete - Pilot Injector (N.G)
S10135	Obsolete - Pilot Injector LPG
S10137	Obsolete - Spark Electrode
S10140	Obsolete - Spring Case Fastners
S10144	Obsolete Electrode lead
S10145	Use S10144
S10148	Not available Complete
S10149	Use 10021235
S10153	Obsolete - Gas Inlet Pipe
S10154	Obsolete - Test Nipple Supply Pipe
S10160	Obsolete - Pilot Tube Union
S10164	Obsolete - Spring
S10166	Obsolete - Test Nipple Screw

S10167	Obsolete - Gas Valve
S10168	Obsolete - Ignition Control Box
S10169	Obsolete - Pipe
S10170	Obsolete - Pilot Tube
S10171	Obsolete - Pilot Assembly
S10172	Obsolete - N.G Injector
S10173	Obsolete - LPG Injector
S10174	Obsolete - Electrode
S10176	Obsolete - Lockout Indicator
S10177	Obsolete - Hot Water Outlet Pipe
S10178	Obsolete - Mechanical Gas Valve
S10179	Obsolete - Mechanical Gas Valve
S10180	Obsolete - Gas Valve Union (Rear)
S10181	Obsolete - Gas Inlet Pipe
S10182	Obsolete - Test Nipple Supply Pipe
S10183	Use S10118
S10184	Obsolete - Spindle
S10185	Obsolete - Screw M4 x 50
S10186	Obsolete - Screw M4 x 25
S10187	Obsolete - Gas Body
S10188	Obsolete
S10189	Obsolete - Venturi
S10190	Obsolete - Venturi
S150	Aquanova hanging bracket
S152	Knob
S159	Valve
S190	Awaiting description
S209	Awaiting description
S419	Obsolete - Fan Exh Pipe
S432	Lateral Insulating Panel
S433	Front Insulating Panel
S435	Rear Insulating Panel
S438	Proof Chamber Cover (W7050168)
S474	Proof Chamber Cover
S538	Sensing Electrode
S597	Spring
S606	Frame (W7050335)
S612	Sight glass Kit
S656	Burner (without diffuser)
S659	Obsolete - NG Diffuser for Burner
S660	LPG Diffuser (for Burner)
S663	Hood Assembly
S675	Sensing Electrode (W7080195)
S757	Adaptor Ring
S758	Fan
T0001	Service Kit
T0002	3 Port Valve Service Kit
T0019	Excell Service Kit
T0021	Obsolete
T0023	Obsolete

T0024	Obsolete
T0026	Obsolete
T0027	Obsolete
T0029	Obsolete - AO Pump Back Section
T0030	Obsolete - Suppressor Pre 1994
T0031	Obsolete - Suppressor
T0034	Obsolete
T0035	Obsolete
T0041	Blanking Kit
T0042	Obsolete - 17mm Alan Keys
T0043	Obsolete - 12mm Alan Keys
T0044	Obsolete - 4mm Alan Keys
T0045	Obsolete - 22mm Alan Key
T0052	Venturi Extractor
T0053	Obsolete - 5mm Alan Key
T0055	Obsolete
T0058	Maxin Service Kit
T0063	Linea Service Kit
T0078	Use 1859
T0079	Use 1860
T0090	Linea 7/Syntesi service kit
T0091	Obsolete - Carbon monoxide detector
T0092	Obsolete - Sentinel X100 Rapid Dose Inhibitor&Water Test Kit
W7060407	Use S150

